 



SPECIFICATION SHEET

# ABB Welcome™

 
## M22401-W 4.3" Wi-Fi Video hands-free indoor station

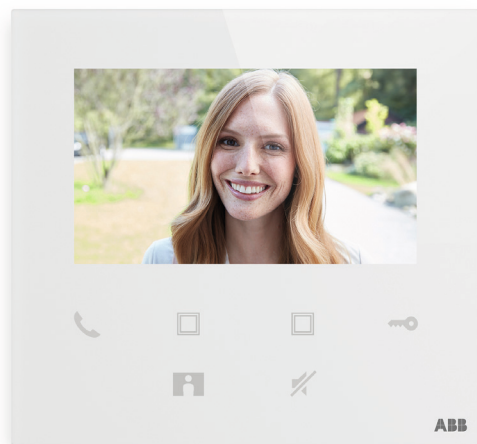


Video indoor station used to initiate and receive communication with outdoor stations, guard stations, and indoor stations. It is easy to install requiring only a single pair of non-polarized wires and connects to local Wi-Fi Signal to provide up to 8 App seats. It can be surface or table mounted.

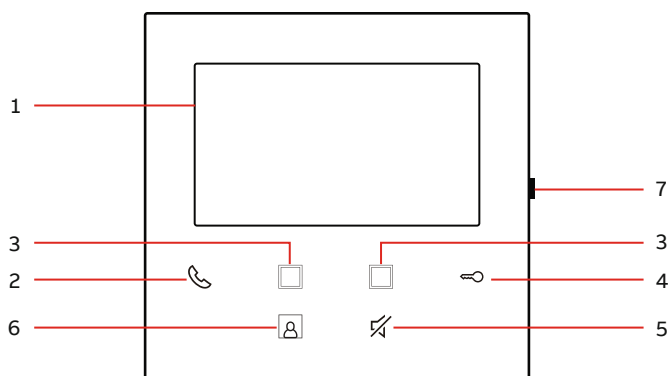

No	Description
1	4.3" IPS screen
2	<b>Communication button</b> <ul style="list-style-type: none"> <li>While a call is coming in, press this button to activate the communication within 30 seconds and press again to end the call.</li> </ul>
3	<b>Programmable button</b> can be set to release the 2nd lock of the outdoor station, call guard unit, intercom call and control the switch actuator.
4	<b>Unlock button</b> <ul style="list-style-type: none"> <li>Open the door by pressing this button at any time.</li> <li>Auto-unlock: The door is automatically opened after an incoming call (Hold this button for more than 3 seconds)</li> </ul>
5	<b>Mute button</b> <ul style="list-style-type: none"> <li>In standby mode, press this button to mute the ringtone of this indoor station.</li> <li>In standby mode, long press this button to mute the ringtone of all indoor stations in the same apartment.</li> <li>While a call is coming in, press this button to reject the call.</li> <li>During the conversation, press this button to mute the microphone.</li> </ul>
6	<b>Surveillance button</b> <ul style="list-style-type: none"> <li>In standby mode, press this button to surveil the outdoor station and external cameras if available.</li> </ul>
7	<b>Setting button</b>

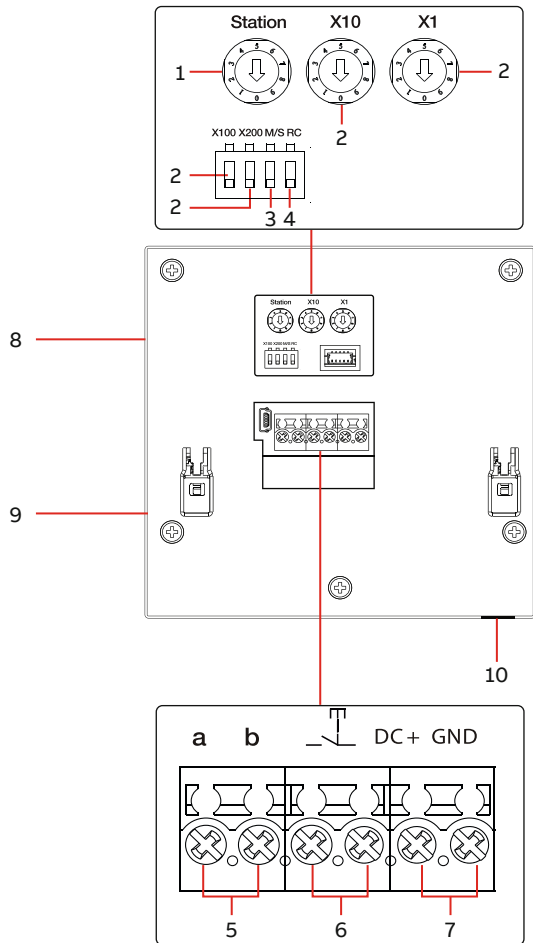 

No	Description
1	<b>Outdoor station selector switch</b> Set the address of the default outdoor station.
2	<b>Indoor station selector switch</b> Selector switch X10 sets tens digits, selector switch X1 sets units digits, Dip switches X100 and X200 set hundreds digits.
3	<b>Master/slave function switch</b> Only one indoor station in each apartment can be set as "Master" (ON=Master).
4	<b>Terminal resistor switch</b> In video installations or mixed audio and video installations, the switch must be set as 'RC on' on the last device of the line (ON=RC on).
5	a, b = bus connector
6	Doorbell pushbutton – Non LED Pushbuttons Only
7	Connector for local power supply - *Only applies to M22403-W
8	Setting button - Press to enter setting mode.
9	Microphone
10	Speaker

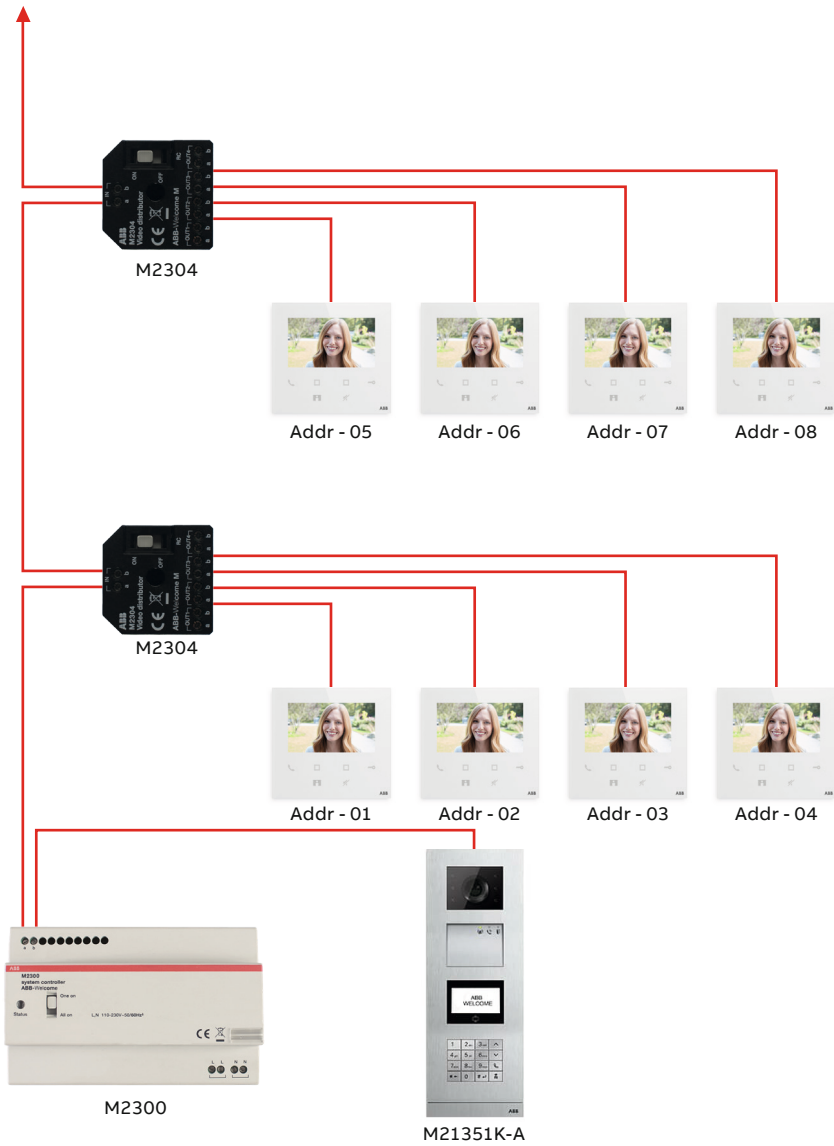 

## Specifications

Display resolution	480 x 272 pixels
Display size	4.3"
Operating temperature	14 °F to 131 °F
Ingress protection	IP30
Bus voltage	20-30 VDC
Product dimensions	5.125" x 4.375" x 0.75"

**ABB Inc.**  
 Electrification Products  
 860 Ridge Lake Boulevard  
 Memphis, TN 38120  
[www.abb.com/door-entry-system-us](http://www.abb.com/door-entry-system-us)

[electrification.us.abb.com](http://electrification.us.abb.com)

USA Technical Support: 888-862-3289  
 7:00 a.m. to 5:00 p.m., CST, Monday - Friday  
[eppc.support@us.abb.com](mailto:eppc.support@us.abb.com)

USA Technical Support: 888-862-3289  
 7:00 a.m. to 5:00 p.m., CST, Monday - Friday  
[eppc.support@us.abb.com](mailto:eppc.support@us.abb.com)

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB Inc. does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB Inc.  
 © 2020 ABB All rights reserved.