

**6533**

**2 Megapixel Mini Dome IP Camera w/POE**

# Table Of Contents

Model Info .....	Page 3
Safety Warnings .....	Page 4
Cable Pin Out & POE .....	Page 5
Camera Assembly .....	Page 6
Connecting To The IP Camera (DHCP).....	Page 7
Connecting To The IP Camera (DHCP) .....	Page 8
Installing The ActiveX Control.....	Page 8
Option Two: Assigning An IP Address (Static) .....	Page 9
Assigning An IP Address cont (Static) .....	Page 10
Assigning An IP Address cont (Static) .....	Page 11
Assigning An IP Address cont (Static) .....	Page 12
Connecting To The IP Camera (Static).....	Page 13
Installing The ActiveX Control.....	Page 13
Configuring Internet Explorer .....	Page 14
Live Viewing .....	Page 15
Live Viewing cont.....	Page 16
Configuration .....	Page 17
System Configuration .....	Page 18
User Management.....	Page 19
System Update .....	Page 20
Network .....	Page 21
Network cont .....	Page 22
Network cont .....	Page 23
Network cont .....	Page 24
Network cont .....	Page 25
ONVIF, Bonjour, LLTD .....	Page 26
Video Settings .....	Page 27
Video Settings .....	Page 28
Video Settings cont.....	Page 29
Video Settings cont.....	Page 30
Video Settings cont.....	Page 31
Recommended Video Settings.....	Page 32
Recommended Video Settings cont .....	Page 33
Event List.....	Page 34
Event List cont.....	Page 35
Schedule .....	Page 36
I/O Setting .....	Page 37
I/O Setting cont.....	Page 38
SD Card .....	Page 39
Port Forwarding.....	Page 40
Port Forwarding TP-Link Routers.....	Page 40
UPNP Port Forwarding .....	Page 41
Specifications .....	Page 42

# Model 6533

## The 6533 is a 2 Megapixel Mini Dome IP Camera w/POE

- Built-in web server allows a user to view high quality, real-time video with Internet Explorer browser.
- Multi-Stream H.264, MJPEG and MPEG
- Live video can be recorded to an NVR and played back remotely, as well as viewed from many mobile phones and other devices.
- Designed for large commercial projects with 100's of cameras or a single family house requiring a camera at the front door.
- Android, iPhone & iPad app available from the respective store

4.2mm fixed focal length lens

Alarm trigger input and N.O. or N.C. switch on relay output

36 Camera CMS (Central Management software, included) will allow you to see all of your cameras anywhere in the world in multiple locations at the same time

High definition 720P at 30FPS

Digital Wide Dynamic Range

Power Over Ethernet or 12vDC power supply

Vandal Proof dome


Micro SD card recording slot inside camera

### 6533 Features:

Channel Vision's 6533 IP mini dome camera offers superior image quality with a 2 megapixel CMOS sensor and has the ability to capture images up to 1280 x 800 pixels.

With H.264 compression, less bandwidth and storage space are used, while delivering full resolution at max frame rate with faster speeds over the internet. Monitoring can be done anywhere an internet connection is available even from a Smart-phone. The 6533 also features event triggered motion recording.

**6533**

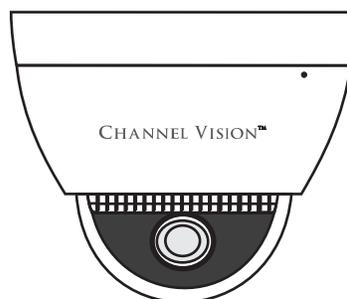

# Safety Warnings

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions for future reference.
3. Heed all warnings.
4. Follow all instructions.
5. Clean only with a dry cloth.
6. Install in accordance with these instructions.
- 7 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
8. Do not defeat the safety purpose of the polarized-type plug. A polarized plug has two blades with one wider than the other. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point of exit from the apparatus.
10. Only use attachments/accessories specified by Channel Vision.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the inside of the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert the user to presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
14. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance accompanying the appliance.
15. Inside of apparatus shall not be exposed to dripping or splashing and objects filled with liquids.


**CAUTION:** To reduce the risk of electric shock, do not remove the cover (or back). There are no user-serviceable parts inside, refer servicing to qualified service personnel.



**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



# Cable Pin Out

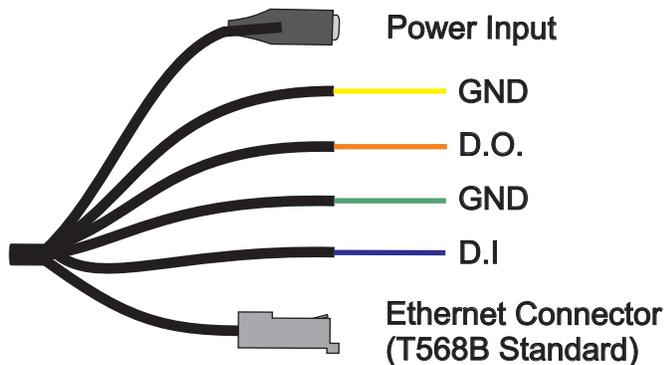

To access the micro SD card slot and reset button, remove the camera cover.

**WARNING: DO NOT CUT THE BREAKOUT CABLE.  
CUTTING THE CABLE WILL VOID THE WARRANTY ON THE DEVICE.**

The breakout cable on Channel Vision's IP Cameras are used for motion detection, event triggering, alarm notifications etc.  
The provided interface connections are explained below.

## 1. Digital Input (GND+DI):

An alarm input for connecting devices that can toggle between an open and closed circuit, for example PIRs, door/window contacts, broken glass detectors, etc. When a signal is received, the state changes and the input becomes active.

## 2. Relay output (GND+DO)

A selectable output for a relay switch, for example LEDs, Sirens, etc.  
Normally Open and Normally Closed can be selected via the Internet Explorer ActiveX control under the "I/O Setting" section on the left.

## 3. Reset to factory default

To restore your IP camera to Channel Vision default settings, unplug the power supply from the camera. Then, plug in power cable and press the "reset" button on the camera for 30 seconds. Once 30 seconds have passed, remove the electric wire and plug in the Ethernet cable. Use IP installer to find the camera IP. (Default is <http://192.168.1.200>) Default username and password is "admin"

# PoE (Power Over Ethernet)

Power over Ethernet (PoE) is a technology that integrates power into a standard LAN infrastructure. It enables power to be provided to the network device, such as an IP phone or a network camera, using the same cable that is used for the network connection.


The PoE switch eliminates the need for power outlets at the camera locations and enables an easier application of uninterruptible power supplies (UPS) to ensure 24 hours a day, 7 days a week operation.

The recommended requirement for a PoE switch is 802.3at, 30.0W.

The minimum requirement for a PoE switch is 802.3af 15W.

If using a PoE switch that does not meet these specifications, full functionality may not be supported.

# Camera Assembly


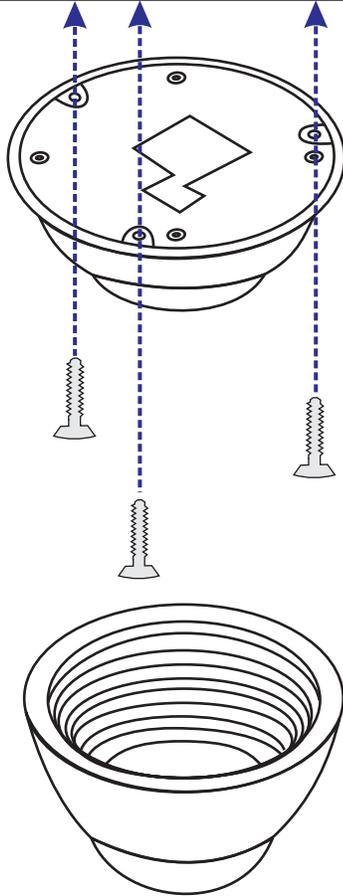


## 1. Use without conversion ring (left)

- a. Use the three included screws to secure the base of the camera to the wall or ceiling. Screw on the camera cover, as tight as possible.

## 2. Use with conversion ring (right)

- a. Use three screws to lock conversion ring onto the ceiling or wall.
- b. Use the second set of three screws to combine the base of the camera with the conversion ring. The cable can pass through the hole on the side of the conversion ring.
- c. Screw on the camera cover, as tightly as possible.

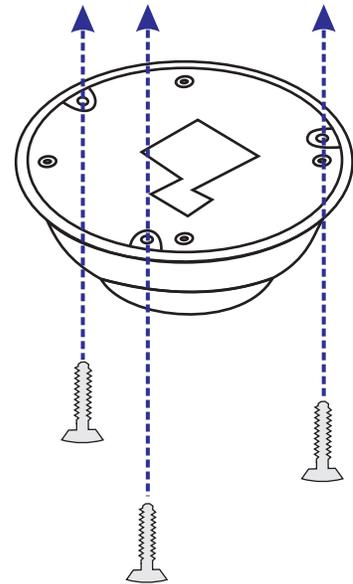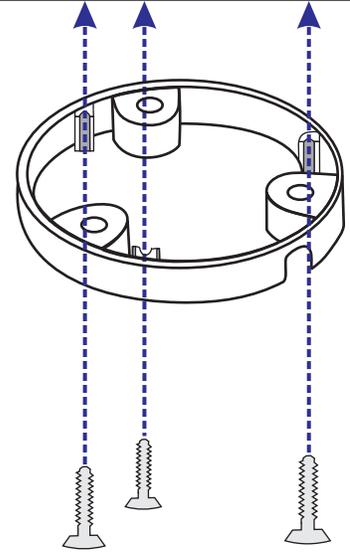

**Surface mount:** (With conversion ring)  
Typically used on a brick wall or in an application that requires the breakout cable to be fed out of the side of the camera.


**Flush mount:** (Without conversion ring)  
Typically used on a ceiling or where the cable can be hidden under the camera.

# Option One: Assigning an IP Address (DHCP)

Your IP Camera comes set to DHCP by default. This means that, just like your laptop computer or desktop PC, an IP address is automatically assigned to the IP camera by your router. This, combined with UPnP (Universal Plug and Play), will make the IP setup of the IP camera a quick and easy task to accomplish.


**\*For the best security, Channel Vision recommends you use a static IP setting and standard port forwarding.**

1. Open IP installer. This is located on your software disk.
2. An IP address should already be assigned  
In the example below, the router has assigned 192.168.1.199 to the IP Camera
3. Double click on the name of the IP Camera. This will open the IP camera in your default browser

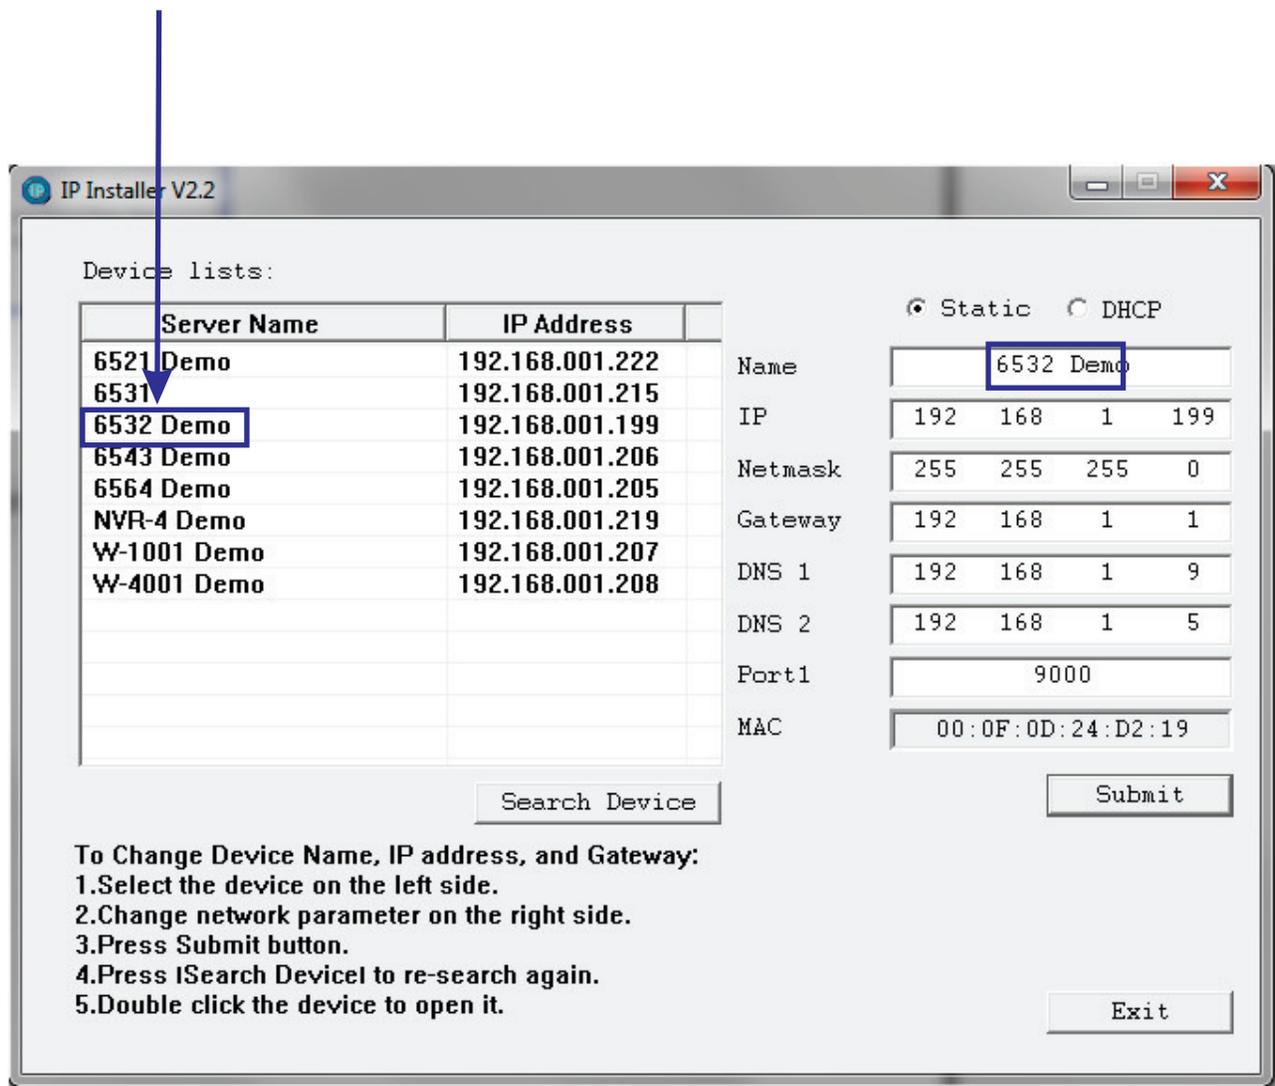



# Connecting To The IP Camera (DHCP)

- You will be prompted for a username and password.  
The default username is **'admin'**  
The default password is **'admin'**

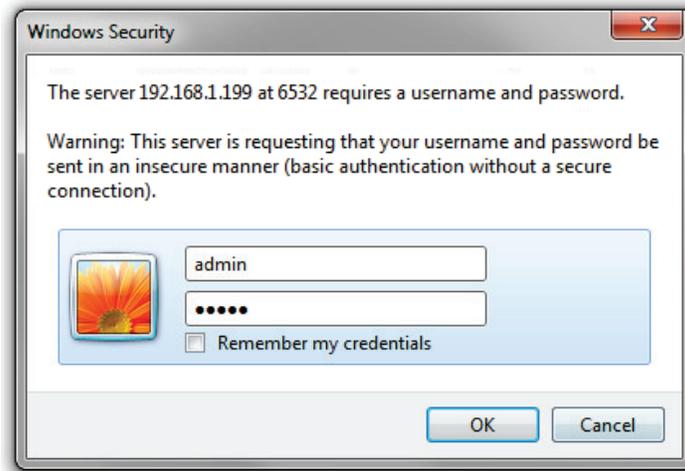

## Installing The ActiveX Control

 - The first time you connect to the camera via Internet Explorer, it will ask you to install the ActiveX control. Internet Explorer 6, 7, 8, or 9 must be used to run this ActiveX control.

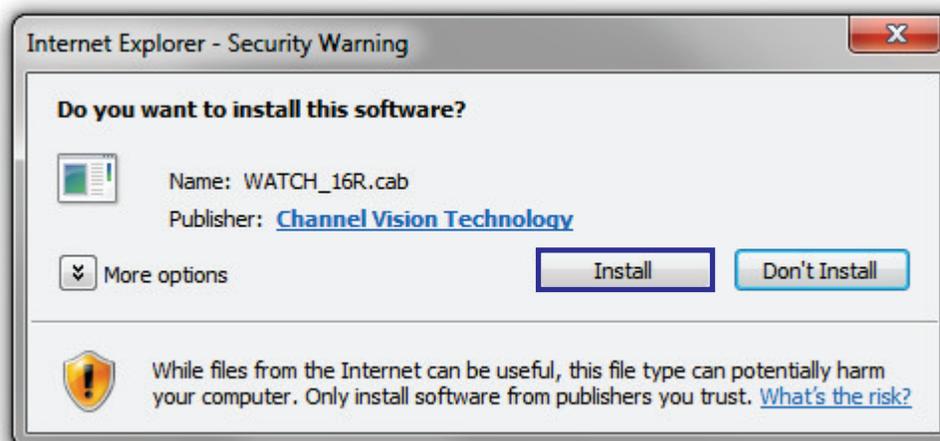

## Option Two: Assigning an IP Address (Static)

1. Use the software, "IP Installer" to assign the IP address to your IP Camera.

You can find "IP Installer" in the supplied CD.

2. Execute IP Installer, located on your disk under the folder "Software"

3. If Windows prompts you to unblock IP Installer, you must select "unlock"

There are 3 options of IP configuration:


A. Fixed IP (Public IP or Virtual IP)

B. DHCP (Dynamic IP)

C. Dial-up/DSL (PPPoE)




Double click the camera name to go directly to the camera

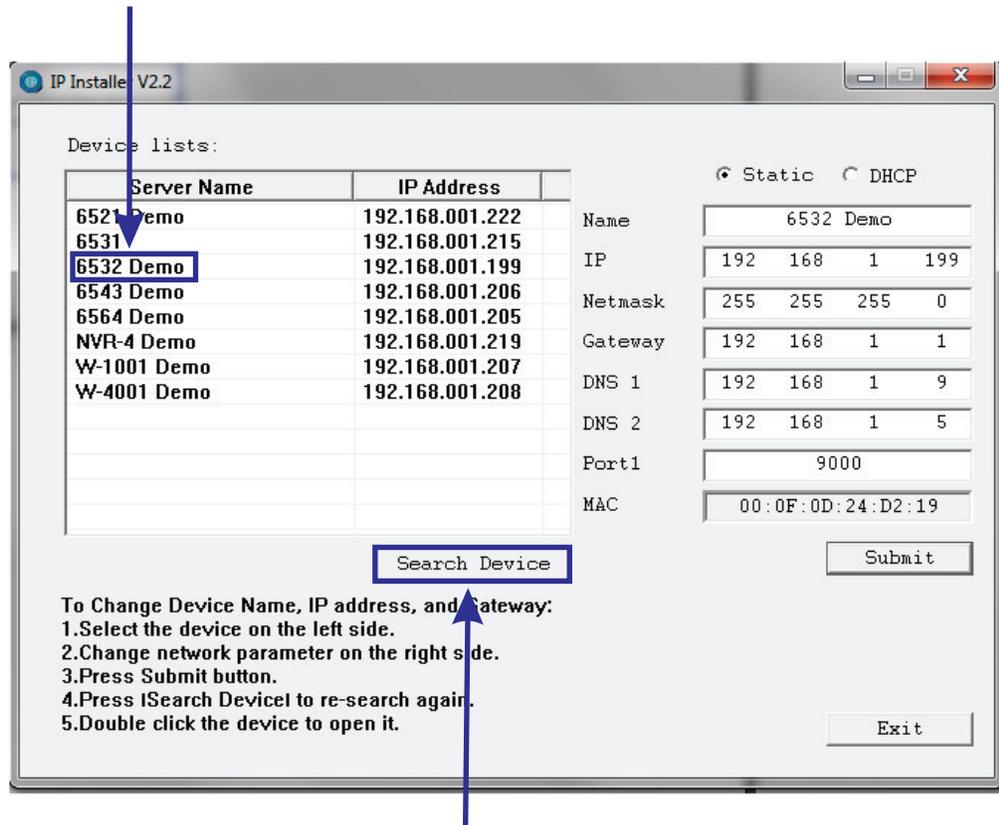

"IP Installer" will search all IP Cameras connected to your LAN network. The user can click "Search Device" to search again.

# Assigning an IP Address (Static) /cont

4. Click the start icon on your computer. 
5. Type the word "run" and select enter on your keyboard.
6. Type in 'cmd' and press enter on your keyboard, or press ok.

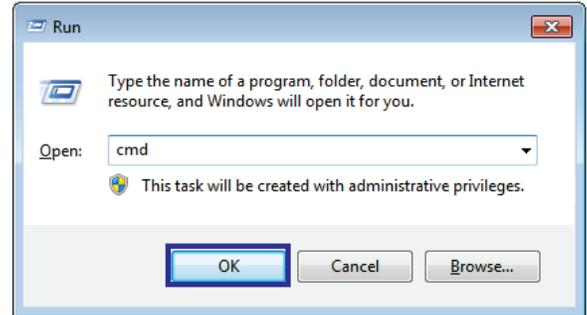

7. Type in '**ipconfig /all**' into the DOS prompt that appears. Press "Enter".
8. Write down your computer's IP address.


Do not use the same IP address as the computer in the IP Camera.

In the example below, the computer's IP address is 192.168.1.74.

The IP address of the IP camera must be different than the IP address in the computer.

Each network-able device in your network has an IP address assigned.

The IP chosen for your IP Camera is not the same address as any other device on your network.

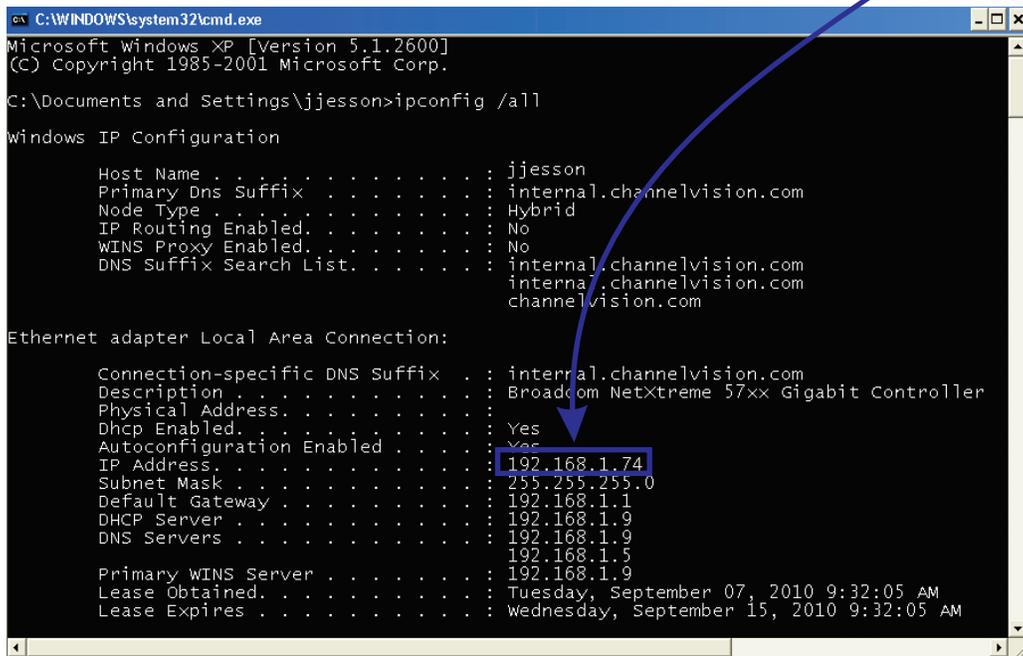

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\jjesson>ipconfig /all

Windows IP Configuration

Host Name . . . . . : jjesson
Primary Dns Suffix . . . . . : internal.channelvision.com
Node Type . . . . . : Hybrid
IP Routing Enabled. . . . . : No
WINS Proxy Enabled. . . . . : No
DNS Suffix Search List. . . . . : internal.channelvision.com
                                   internal.channelvision.com
                                   channelvision.com

Ethernet adapter Local Area Connection:

Connection-specific DNS Suffix . : internal.channelvision.com
Description . . . . . : Broadcom NetXtreme 57xx Gigabit Controller
Physical Address. . . . . :
Dhcp Enabled. . . . . : Yes
Autoconfiguration Enabled . . . . : Yes
IP Address. . . . . : 192.168.1.74
Subnet Mask . . . . . : 255.255.255.0
Default Gateway . . . . . : 192.168.1.1
DHCP Server . . . . . : 192.168.1.9
DNS Servers . . . . . : 192.168.1.9
                          192.168.1.5
                          192.168.1.9
Primary WINS Server . . . . . :
Lease Obtained. . . . . : Tuesday, September 07, 2010 9:32:05 AM
Lease Expires . . . . . : Wednesday, September 15, 2010 9:32:05 AM
```

# Assigning an IP Address (Static) /cont

9. Copy/write down the following information from the DOS prompt.

- A. Default Gateway (Example 192.168.1.1)
- B. DNS Server (if 2 servers, use the first one, for example 192.168.1.9)
- C. Subnet Mask (Example 255.255.255.0)

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\jjesson>ipconfig /all

Windows IP Configuration

    Host Name . . . . . : jjesson
    Primary Dns Suffix . . . . . : internal.channelvision.com
    Node Type . . . . . : Hybrid
    IP Routing Enabled. . . . . : No
    WINS Proxy Enabled. . . . . : No
    DNS Suffix Search List. . . . . : internal.channelvision.com
                                      internal.channelvision.com
                                      channelvision.com

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix . : internal.channelvision.com
    Description . . . . . : Broadcom NetXtreme 57xx Gigabit Controller
    Physical Address. . . . . :
    Dhcp Enabled . . . . . : Yes
    Autoconfiguration Enabled . . . . . : Yes
    IP Address. . . . . : 192.168.1.74
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.1.1
    DHCP Server . . . . . : 192.168.1.9
    DNS Servers . . . . . : 192.168.1.9
                                      192.168.1.5
    Primary WINS Server . . . . . : 192.168.1.9
    Lease Obtained. . . . . : Tuesday, September 07, 2010 9:32:05 AM
    Lease Expires . . . . . : Wednesday, September 15, 2010 9:32:05 AM
```

# Assigning an IP Address (Static) /cont

7. Enter the information you wrote down into the IP camera network page

- A. Default Gateway (Enter this number under “Gateway”)
- B. DNS Server (Enter this number under “DNS 1”)
- C. Subnet Mask (Enter this number under “Netmask”)

8. Giving the IP Camera a unique IP address.

Assign an IP address to the IP Camera by using the first 3 sets of numbers of your default gateway.

An IP address has 4 sets of numbers, each followed by a period.

For example, xxx.xxx.xxx.xxx

My default gateway is 192.168.1.1

For example, my IP Camera’s address will start with 192.168.1.xxx

9. Make sure you use a number different that your computer’s IP address.

(Generally between 2-250) This number needs to be out of the range of DHCP. DHCP is assigned with your router, and can be checked by logging into the router.

My computer’s IP address is 192.168.1.74. 192.168.1.208 is used in the example below.

You must choose a number that is different from your computer’s IP.

If your IT technician has designated a static internal IP for your IP Camera, use that address.

10. To assign the port, choose a port between 5400-9000, and type it into “Port 1” If a specific port has

The screenshot shows the IP Installer V2.2 window. On the left, a table lists devices: 'Parking Lot' with IP 192.168.001.209 and 'North West Wall' with IP 192.168.001.208. The 'North West Wall' device is selected. On the right, configuration fields are shown for 'Static' mode. Annotations with arrows point to these fields: 'First 3 sets of numbers are same as the computer's IP address' points to the IP address field (192.168.1.208); 'Select "Static"' points to the radio button; 'Name' points to the text field 'North West Wall'; 'Fourth number (different than computer)' points to the last octet of the IP (208); 'Subnet Mask (same as computer)' points to the netmask field (255.255.255.0); 'Default Gateway (same as computer)' points to the gateway field (192.168.1.1); 'DNS Server 1 (same as computer)' points to the first DNS field (192.168.1.5); 'DNS Server 2 (same as computer)' points to the second DNS field (192.168.1.9); 'Port (A port between 9000-9999 is recommended, but any network port can be used)' points to the Port1 field (8006). The MAC address is 00:0F:0D:20:F0:1B. A 'Submit' button is at the bottom right. Below the window, instructions for changing device name, IP, and gateway are provided.

Server Name	IP Address
Parking Lot	192.168.001.209
North West Wall	192.168.001.208

Device lists:

Static  DHCP

Name: North West Wall

IP: 192 168 1 208

Netmask: 255 255 255 0

Gateway: 192 168 1 1

DNS 1: 192 168 1 5

DNS 2: 192 168 1 9

Port1: 8006

MAC: 00:0F:0D:20:F0:1B

Search Device Submit

To Change Device Name, IP address, and Gateway:  
1. Select the device on the left side.  
2. Change network parameter on the right side.  
3. Press Submit button.  
4. Press ISearch DeviceI to re-search again.  
5. Double click the device to open it.

Exit

To change numbers, select the appropriate area on IP installer with your mouse, and type in the info.

\*Disclaimer: This is an example based on a general network setup. All networks do not match these settings exactly, as all networks are different

# Connecting To The IP Camera (Static)

1. Open Internet Explorer. Type the IP address of the IP camera into the browser link window. Also, make sure to type the port at the end of the link.


For example, I will type in **http://192.168.1.199:9000**

2. You will be prompted for a username and password. The default username is **'admin'**  
The default password is **'admin'**



## Installing The ActiveX Control


1. The first time you connect to the camera via Internet Explorer, it will ask you to install the ActiveX control. Internet Explorer 6, 7, 8, or 9 must be used to run this ActiveX control.

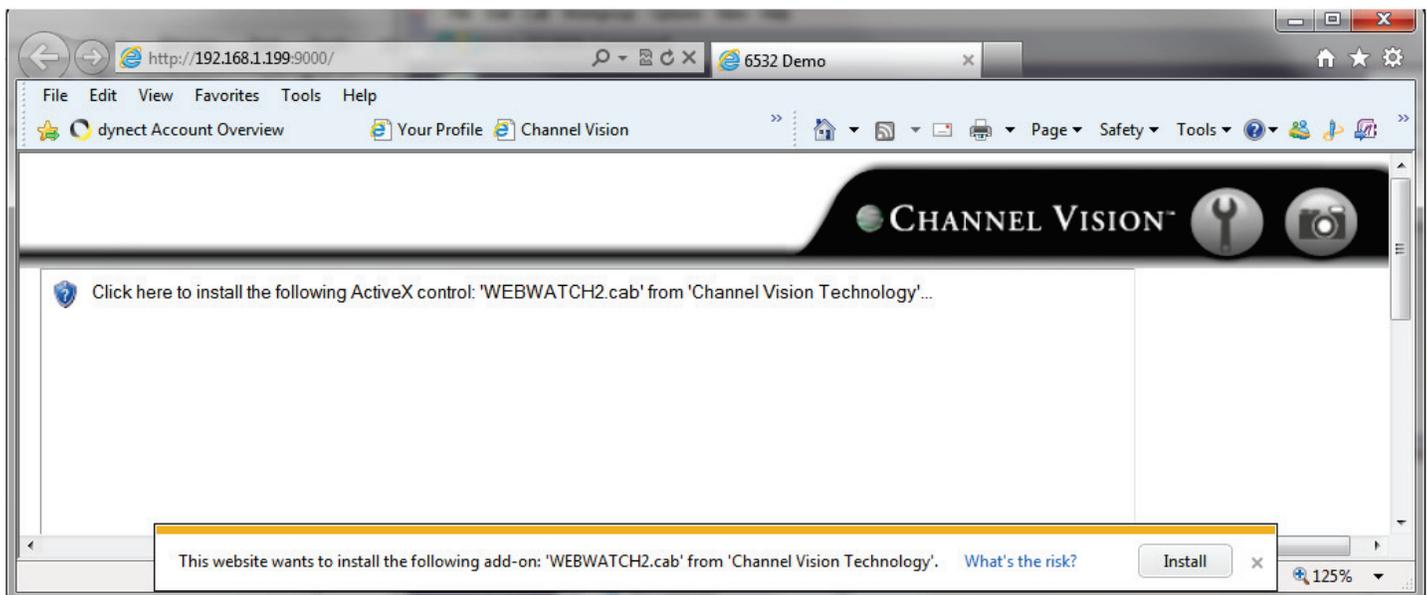


# Configuring Internet Explorer

If the installation of the ActiveX control fails, for example the browser page says “done” but you do not see your camera, please check the security settings for your IE browser. Follow the instructions below.


1

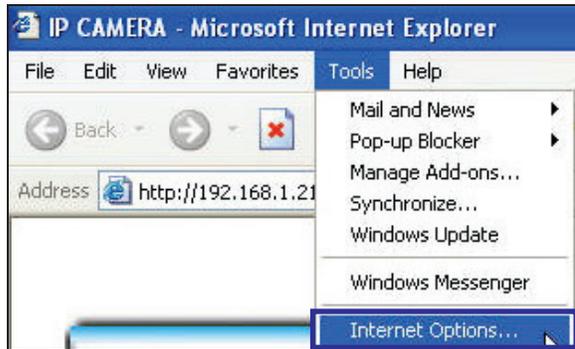


2

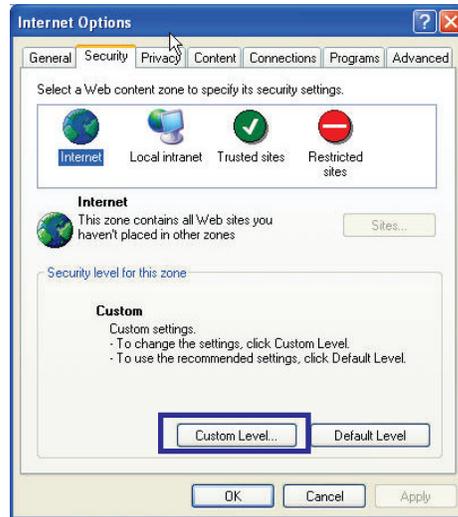


3

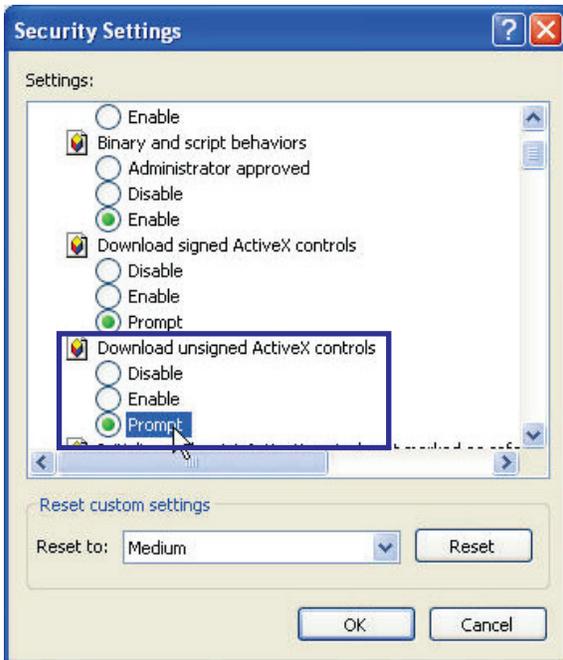

4

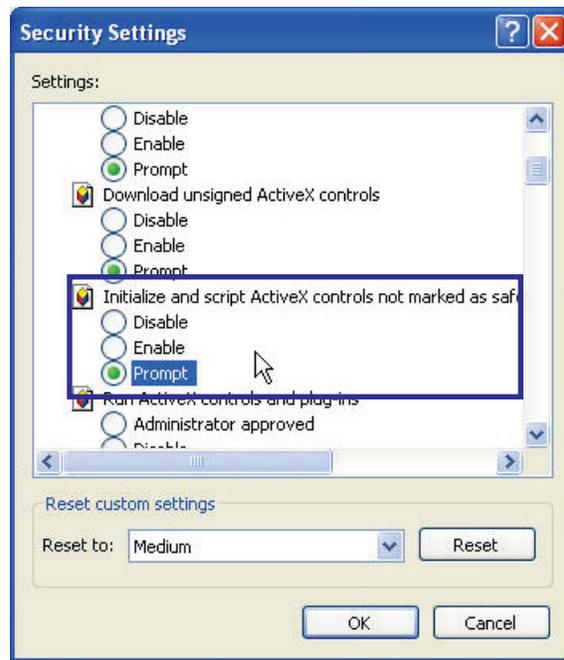

When popup the following dialogue box, click “Yes”.

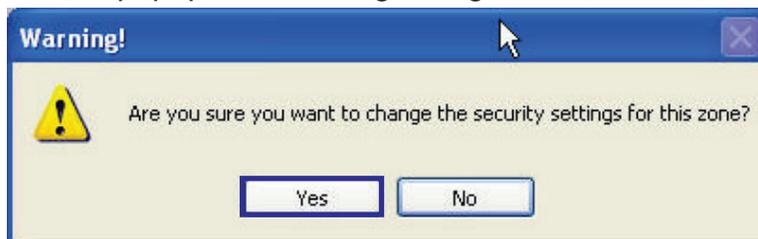

5

# Live Viewing

Once you connect to your camera, you will see the following screen. Below the icons and their functionality are defined.

The screenshot shows a live video feed of a parking lot with a white pickup truck and a silver sedan. The interface includes a top bar with the text "CHANNEL VISION" and two icons: a wrench (Settings) and a camera (Snapshot). Below the video feed is a control bar with the following elements: a timestamp "2010/DEC/17 02:53:41 Size:" followed by "FPS: 15", a "default" dropdown menu, a "Streaming 1" dropdown menu, "Online Visitor: 1", and a "Relay Out:" section with "ON" and "OFF" radio buttons. Annotations with arrows point to these elements: "Snapshot" and "Settings" point to the top icons; "Controls the selection of the video stream that is being viewed" points to the "Streaming 1" dropdown; "Controls the physical size of the streaming video on the browser screen" points to the "default" dropdown; "Shows the number of users connected at any given time" points to "Online Visitor: 1"; and "Activates relay output" points to the "Relay Out:" section. A format string "Format: Year/Month/Day/Hour/Minute/Second/ Image Size/Frames Per Second" is located at the bottom left.

Snapshot

Settings

CHANNEL VISION

2010/DEC/17 02:53:41 Size: FPS: 15

default Streaming 1

Online Visitor: 1

Relay Out:  ON  OFF

Controls the selection of the video stream that is being viewed

Shows the number of users connected at any given time

 
Controls the physical size of the streaming video on the browser screen

Activates relay output


Format: Year/Month/Day/Hour/Minute/Second/ Image Size/Frames Per Second

# Live Viewing/cont.

1. This icon opens the settings menu



 
2. This icon takes a snapshot



3. This icon shows system time, video resolution, and video refresh rate

2010/NOV/25 02:39:04 Size:800x592 FPS: 10

 4. The bottom bar has an icon that allows you to select which stream you want to view. Stream 1 is usually the larger, better quality stream. Stream 2 is the smaller stream, generally used for mobile viewing



5. The bottom bar has an icon shows how many users are connected to the IP camera.

Online Visitor : 1

6. This icon will control/activate the relay output on the camera wire pigtail. A relay can activate lights, alarms, or anything that uses a contact closure.

Relay Out:  ON  OFF

7. If you double click the video feed, it will make the video full screen. To change video back to normal mode, press 'Escape' on your keyboard, or double click anywhere in the video feed a second time.


8. If you right click on the video, you have access to several different functions.

- A. Snapshot: Takes a snapshot
- B. Record Start : Records video to your computer
- C. Full Screen: Click to enter full-screen mode
- D. Zoom: Digital Zoom. This is explained below
- E. Frame BuffmSec: This changes the frame buffer rate  
(Increasing the buffer rate will provide a smoother video stream)




## Digital zoom

1. Select "Enable digital zoom"
2. Select the area of the screen you wish to zoom (up to 400%)
3. Select the zoom level


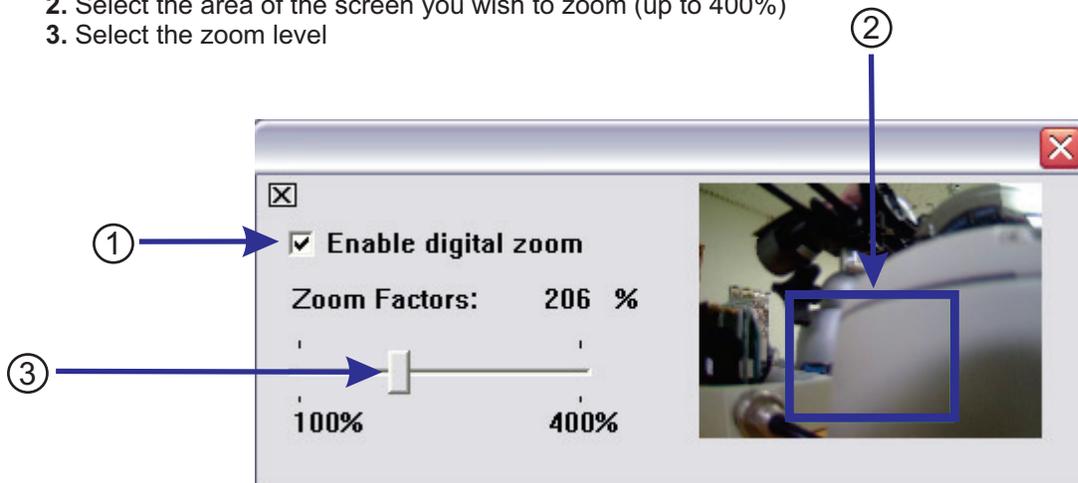


# Configuration

1. Select this icon to enter the settings menu

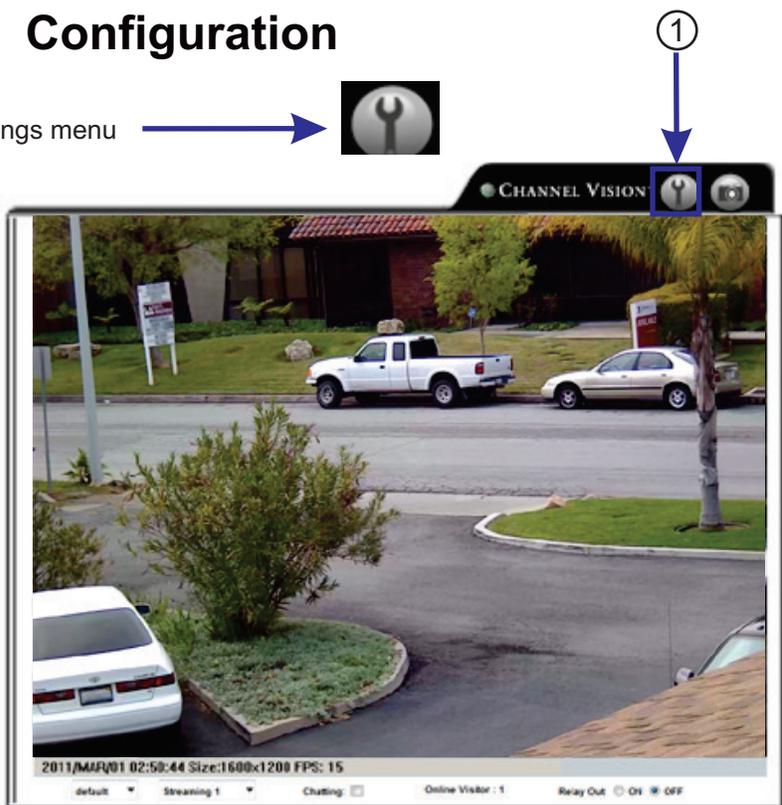

 2. Select this icon to go back to your live video feed

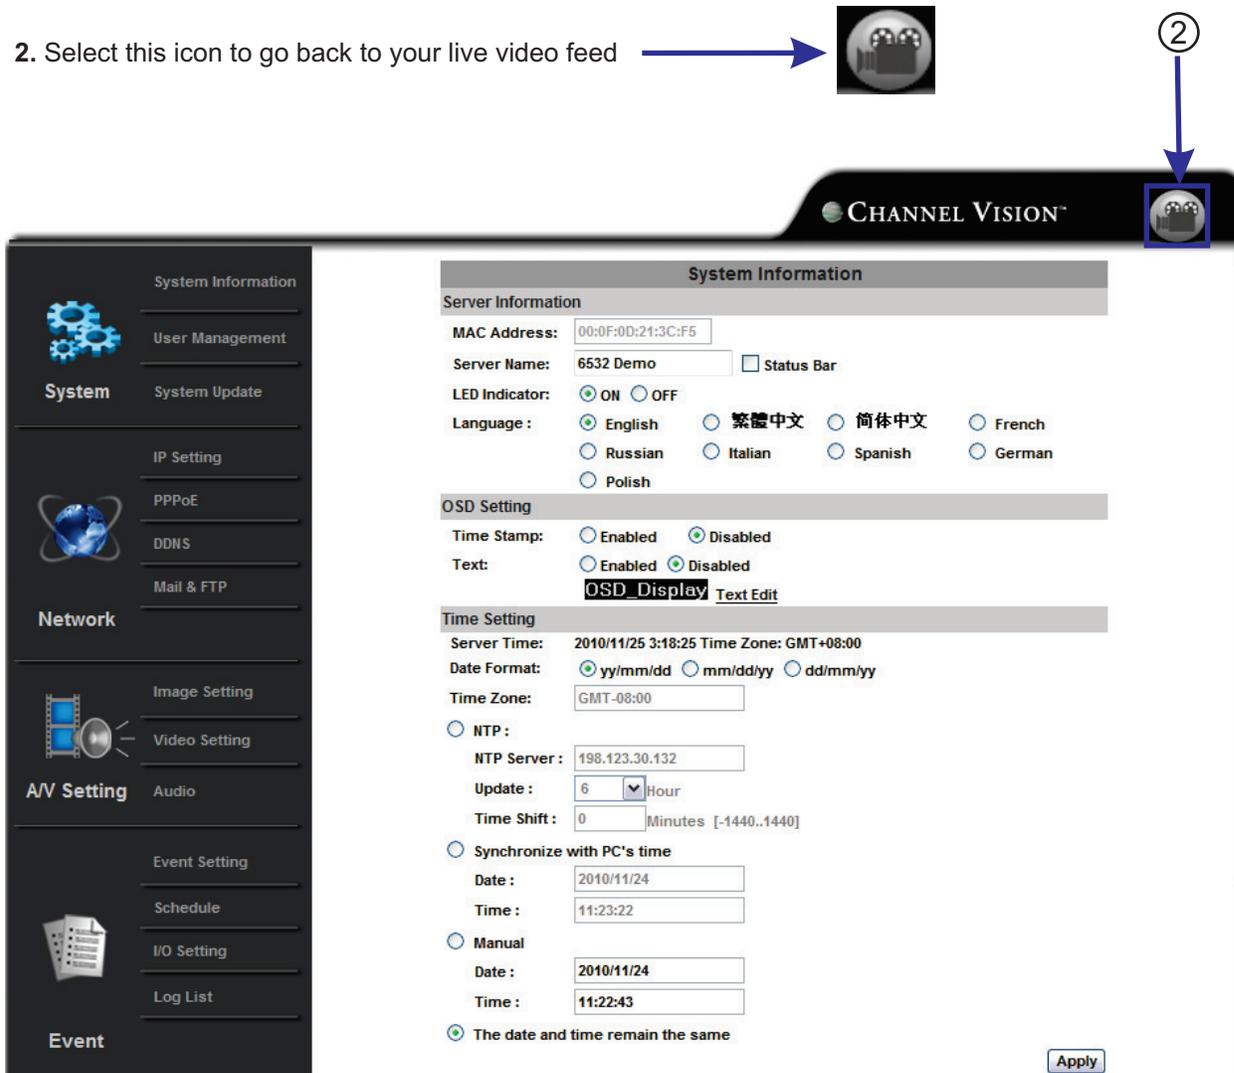

# System Configuration

## System Information:

Use the number scheme below for a description of each item:

1. **MAC Address:** (Media Access Control) address; This is a unique identifier assigned to IP devices for communication with the network. Your IP camera is pre-set with a MAC address
2. **Server name:** Select to edit the camera name
3. **LED Indicator:** Select On/Off to toggle the blinking LED light in the camera
4. **Language:** Select a language to change the language of the ActiveX interface
5. **Status Bar:** Select On/Off to toggle the information bar (below the main video stream)
6. **Time Stamp:** Select Enabled/Disabled to turn the video timestamp on or off
7. **Text:** Select Enabled/Disabled to specify the name that can be displayed on the top left area of the screen
8. **Server Time:** This shows the current time on your IP camera
9. **Date Format:** Select to choose your desired date format
10. **Time Zone:** This shows your current time zone
11. **NTP:** The Network Time Protocol is a protocol for synchronizing the clocks of computer systems
12. **NTP Server:** If you have a NTP server, input it here
13. **Update:** If using an NTP server, select this drop down menu to choose the update interval
14. **Time Shift:** Time shift is used to compensate for the time it takes to server to process the sync request for your time. This is usually not needed.
15. **Synchronize with PC's time:** Select this to match your computer's clock to your IP camera
16. **Apply:** Select this button to save your changes

The screenshot shows the 'System Information' configuration page. It is divided into several sections: 'Server Information', 'OSD Setting', and 'Time Setting'. Each section contains various configuration options with numbered callouts (1-16) pointing to specific elements. The 'Server Information' section includes fields for MAC Address, Server Name, LED Indicator, and Language, along with a Status Bar checkbox. The 'OSD Setting' section includes Time Stamp and Text options. The 'Time Setting' section includes Server Time, Date Format, Time Zone, NTP, NTP Server, Update interval, Time Shift, and Synchronize with PC's time options. An 'Apply' button is located at the bottom right.

**System Information**

**Server Information**

① **MAC Address:** 00:0F:0D:21:3C:F5

② **Server Name:** 6532 Demo  **Status Bar** ⑤

③ **LED Indicator:**  ON  OFF

④ **Language :**  English  繁體中文  简体中文  French  
 Russian  Italian  Spanish  German  
 Polish

**OSD Setting**

⑥ **Time Stamp:**  Enabled  Disabled

⑦ **Text:**  Enabled  Disabled

**OSD\_Display** [Text Edit](#)

**Time Setting**

⑧ **Server Time:** 2010/11/25 3:28:44 Time Zone: GMT+08:00

⑨ **Date Format:**  yy/mm/dd  mm/dd/yy  dd/mm/yy

⑩ **Time Zone:** GMT-08:00

⑪  **NTP :**

⑫ **NTP Server :** 198.123.30.132

⑬ **Update :** 6 Hour

⑭ **Time Shift :** 0 Minutes [-1440..1440]

⑮  **Synchronize with PC's time**

**Date :** 2010/11/24

**Time :** 11:33:41

**Manual**


**Date :** 2010/11/24

**Time :** 11:22:43

**The date and time remain the same**

⑯ **Apply**

# User Management

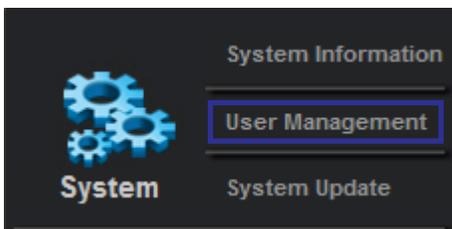

## User management:

This IP camera supports 3 different types of users.

1. Administrator
2. General
3. Anonymous

A screenshot of the "User Management" web interface. At the top, there's a "User Management" header. Below it is the "Anonymous User Login" section with radio buttons for "YES" (selected) and "NO", and a "Setting" button. The "Add User" section has three input fields: "Username:", "Password:", and "Confirm:". Below that is a "User List" table with columns "Username", "User Group", "Modify", and "Remove". The table contains one row with "admin" as the username and "Administrator" as the user group. The "Modify" column has an "Edit" button, and the "Remove" column has a "Remove" button. A blue box highlights the "Add/Set" button on the right. Blue arrows point from the "YES" radio button, the "Add/Set" button, and the "Edit" button to the text instructions below.

Click "Yes" to allow anonymous user access

Click "Add/Set" to add a user

Click "Edit" to modify a user.


When you click edit, the following window will pop up:

(Shown below.)

A screenshot of a "User\_Setting" dialog box in a Windows Internet Explorer browser window. The browser address bar shows "http://192.168.1.207:8005/muser.html". The dialog box has a title bar "User\_Setting - Windows Internet Explorer" and a "User Setup" header. It contains three input fields: "Username:" with "admin" entered, "Password:", and "Confirm:". An "OK" button is highlighted with a blue box. A blue arrow points from the "OK" button to the text below.


Add the username and password, and click "OK" to save your new user.

# System Update

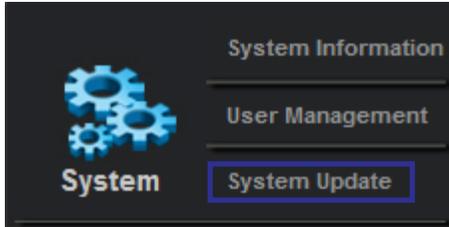


**System Update:** This menu is used to perform the following functions:

- 1. Firmware Update:** Channel Vision will update the firmware from time to time. By registering your IP camera, you have access to all firmware improvements and extended warranty options. How? See the product page on [www.channelvision.com](http://www.channelvision.com). To load new firmware, press “Browse” and select the firmware.bin file.

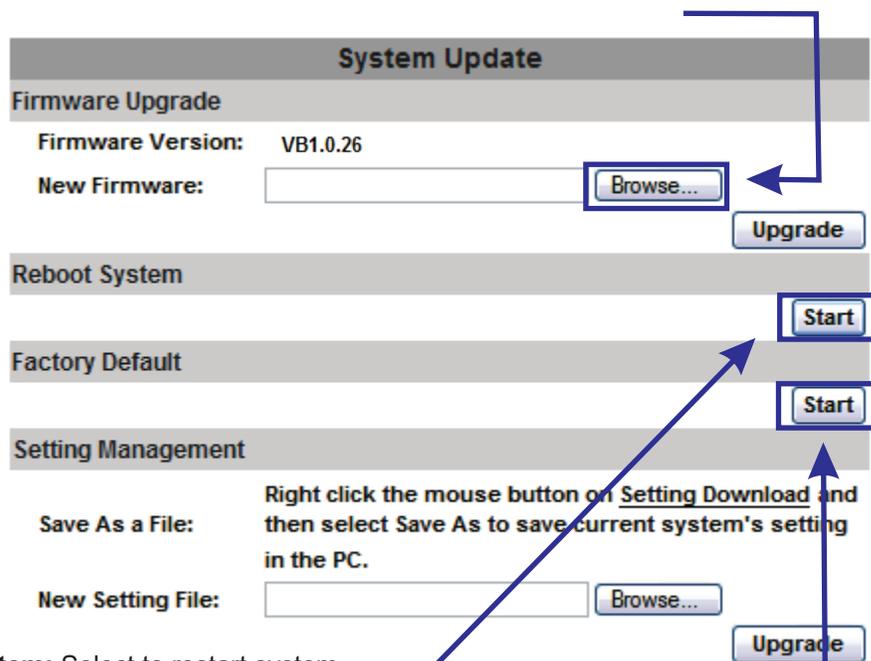

- 2. Restart System:** Select to restart system. You can reset the IP camera to factory default settings if desired. If you backup your settings, you can load your backup file where it says “New Setting File”

- 3. Settings backup:** You can backup your settings by right clicking your mouse on “Setting Download” and selecting “Save Target As”. You may also load previously saved settings files this way. When loading previously saved file click “Browse” and then “Upgrade”

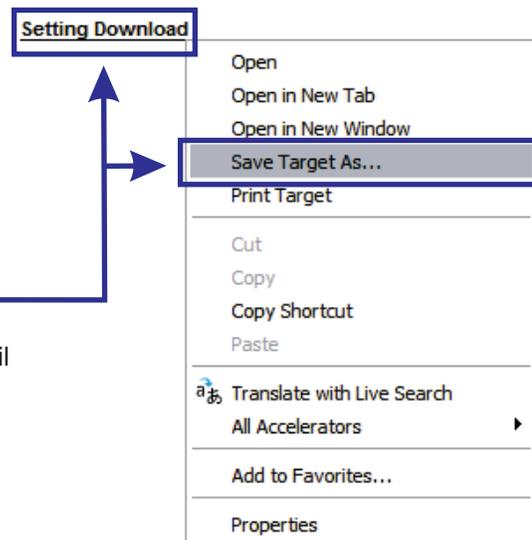

# Network



**Network Setup/IP Setting:** This setting is for the external viewing of camera over the internet. Once set up, you will be able to view this camera from anywhere in the world. This IP camera supports DHCP and Static settings. If you are new to installing an IP camera, use #2 (**Static IP**)

**DHCP:** If you use this setting, your IP information will be pulled automatically from your router. This not recommended if you are going to view this camera outside of the building that it resides in.

**Static IP:** This is an IP that you manually set. This IP must not be the same as any other device within your network. You must also set default gateway, DNS server, subnet mask, and DNS server. Please refer to page 6 & 7 for instructions on how to obtain these numbers.

**Port Assignment:** You can assign different ports for your camera. (Explained below.)

**Web Page Port:** (This is the port that 99% of installations will use)  
A web page port is used to transmit data out of your network. For example, If my external IP address is **http://67.88.12.50**, and my port was 5400, I would put a “.” and the port. The final address would be **http://67.88.12.50:5400**

**RTSP Transmitting Port:** Port for RTSP stream. Used for many automation systems.

**RTP start and end port:**  
In RTSP mode, you may use TCP and UDP for connecting  
TCP connection uses RTSP port (554) UDP connection uses RTP start & end port.

**UPnP:** This IP camera supports UPnP. If this service is enabled on your computer, the camera will be automatically detected and a new icon will be added to “My Network Places”.

Below are instructions on how to activate UPnP on your computer:

- A. Open the control panel from the start menu.
- B. Select “Add/Remove programs”
- C. Select “Add/Remove Windows components”
- D. Open “Networking Services” section
- E. Click “Details” and select UPnP to setup the service.
- F. Once activated, the IP camera icon will appear in “My Network Places”
- G. You can now double click that icon to access the camera with your IE browser.

# Network/cont



## Network/cont:

**IPV4:** Below is an example of the **IPV4** network settings menu. This is where you key in all of your IP information from your network. These settings must be entered correctly in order for the IP camera to be viewable over the network.


A screenshot of the "IP Setting" configuration page. The page is divided into several sections: "IP Assignment" with radio buttons for "DHCP" and "Static" (selected); "Port Assignment" with input fields for "Web Page Port" (8005), "RTSP Port" (554), "RTP Start Port" (5000), and "RTP End port" (9000); and "UPnP" with radio buttons for "UPnP" (Enabled) and "UPnP Port Forwarding" (Disabled), plus input fields for "External Web Port" (80) and "External RTSP Port" (554). An "Apply" button is at the bottom right.

**PPPoE:** Check the PPPoE "Enabled" button to activate this function.

A screenshot of the "PPPoE Setting" configuration page. It features a "PPPoE Setting" section with radio buttons for "Enabled" (selected) and "Disabled". Below are input fields for "Username:" and "Password:". A "Send mail after dialed" section has an unchecked "Enabled" checkbox and a "Subject:" field with the text "PPPoE From IPcam". An "Apply" button is at the bottom right. A blue arrow points from the "Enabled" radio button to the "Disabled" radio button.

You can key in a username and password for the connection if you are using ADSL. Send mail after dialed: When connected to the internet, this IP camera will send a email to the specified email account. To configure the IP camera email settings, please refer to the "Mail and FTP Settings"

# Network/cont

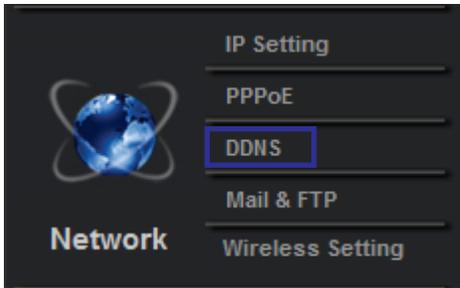

## Network/cont: DDNS:


This IP camera supports DDNS (Dynamic DNS) service. Select "Enabled" to enable the DDNS service.

For viewing the IP Camera over the internet while using a dynamic (rotating) IP address, there are many services available online.

A screenshot of the DDNS configuration page. The page has a title bar "DDNS" and a sub-header "DDNS Setting". Below the header, there are two radio buttons: "Enabled" (selected) and "Disabled". Below this, there are four input fields: "Provider:" (a dropdown menu showing "dyndns.org"), "Hostname:", "Username:", and "Password:". Below these is a "Schedule Update:" field with the value "1440" and the unit "Minutes". Below the input fields is a "State" section with a dropdown menu showing "Idle" and an "Apply" button. Below the "Apply" button is a "Note:" section with two numbered paragraphs. Blue arrows point from the "Apply" button to the "Enabled" radio button, and from the "Enabled" radio button to the "Provider:", "Username:", and "Password:" fields. Another blue arrow points from the "Apply" button to the "Schedule Update:" field.

1. Enable the service
2. Key in the DynDNS server name, username, and password
3. Set up the IP update refresh rate
4. Click "Apply"
5. If it updates too often, the IP will be blocked by DynDNS  
Channel Vision recommends you set it to update once per day (1,440 minutes)

# Network/cont

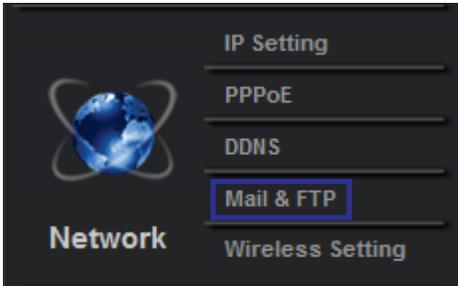

**Mail & FTP:** Enter your Mail and FTP information into the menu below:


**Mail:** Mail is a way the IP camera can send you an email when certain actions occur, for example motion, a contact closure on the sensor, etc.

**FTP:** FTP is for uploading recorded files to a designated FTP site

Mail & FTP	
<b>Mail Setting</b>	
Login Method:	Account <input type="button" value="v"/>
Mail Server:	<input type="text"/>
Username:	<input type="text"/>
Password:	<input type="text"/>
Sender's Mail:	<input type="text"/>
Receiver's Mail:	<input type="text"/>
Bcc Mail:	<input type="text"/>
Mail Port:	25 (Default 25)
<input type="button" value="Test"/>	
<b>FTP Setting</b>	
FTP Server:	<input type="text"/>
Username:	<input type="text"/>
Password:	<input type="text"/>
Port:	21
Path:	/
Mode:	PORT <input type="button" value="v"/>
Create the folder:	Yes <input type="button" value="v"/> (ex:Path/20100115/121032m.avi)
<input type="button" value="Test"/> <input type="button" value="Apply"/>	

Please note: standard free web mail email services block devices such like this, due to spam settings.

# Network/cont

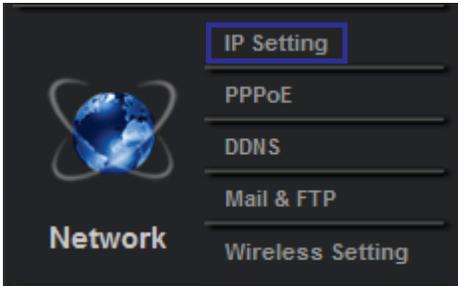

**Network/cont, IPV6:** Below is an example of the **IPV6** network settings menu. This is where you key in all of your IP information from your network. These settings must be entered correctly in order for the IP camera to be viewable over the IPV6 network.

To manually set your IPV6 address, select that option, and enter your address, gateway, and DNS server.

For DHCPv6, click "enabled"


A screenshot of the "IPv6 Assignment" settings menu. The menu is titled "IPv6 Assignment" and contains the following options:

- IPv6 Enabled:
- Manually setup the IPv6 address:
  - IPv6 Address/Prefix: :: [input] / 64
  - IPv6 Gateway: :: [input]
  - IPv6 DNS: :: [input]
- DHCPv6:  Enabled  Disabled

At the bottom of the form, there is a box containing the text "IPv6 Address: fe80::20f:dff:fe24:3d55".

Your current IPV6 address

# ONVIF, Bonjour, LLTD

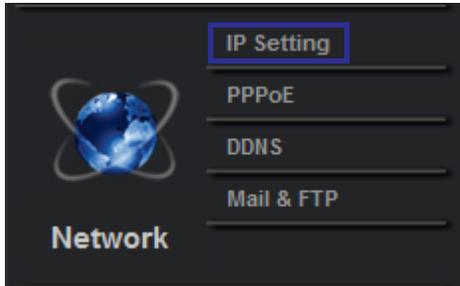

## 1. ONVIF: (Open Network Video Interface Forum)

ONVIF is a global and open industry forum with the goal to facilitate the development and use of a global open standard for the interface of physical IP-based security products

The following ONVIF versions are supported: **1.01**, **1.02**, and **2.10**.

There are also custom options available, such as security and RTSP keep alive that may be specified by the ONVIF supported device. When RTSP keep alive is enabled, the camera checks every hour to see if the device linked to the camera via ONVIF is still connected. If the connection stops, the IP camera stops transmitting video out.

2. **Bonjour:** This is Apple's implementation of Zero configuration networking (Zeroconf), a group of technologies that includes service discovery, address assignment, and hostname resolution. Bonjour locates devices such as printers, other computers, and the services that those devices offer on a local network using multicast Domain Name System (mDNS) service records. To enable Bonjour, click "enabled" and specify the name of the IP camera.


## 3. LLTD: (Link Layer Topology Discovery)

LLTD is a proprietary Link Layer protocol for network topology discovery and quality of service diagnostics. Microsoft developed it as part of the Windows Rally set of technologies. The LLTD protocol operates over both wired (such as Ethernet (IEEE 802.3) as well as wireless networks (such as IEEE 802.11). To Enable LLTD, select "enabled"

A screenshot of a network configuration interface showing three sections: ONVIF, Bonjour, and LLTD. The ONVIF section has three rows: 'ONVIF:' with radio buttons for 'v2.10/v1.02' (selected), 'v1.01', and 'Disabled'; 'Security:' with radio buttons for 'Enabled' and 'Disabled' (selected); and 'RTSP Keepalive:' with radio buttons for 'Enabled' (selected) and 'Disabled'. The Bonjour section has two rows: 'Bonjour:' with radio buttons for 'Enabled' and 'Disabled' (selected); and 'Bonjour Name:' with a text input field containing 'IP\_Camera' and a MAC address '@00:0F:0D:24:D2:19'. The LLTD section has one row: 'LLTD:' with radio buttons for 'Enabled' (selected) and 'Disabled'. An 'Apply' button is located at the bottom right.

Bonjour is a trademark of Apple Inc., registered in the U.S. and other countries

# Video Settings

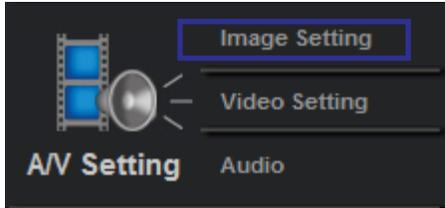


**Image Setting:** You can adjust the following items on this camera:

1. **Brightness:** This adjusts the brightness level of the camera
2. **Contrast:** This adjusts the difference in color and light between parts of an image
3. **Hue:** This adjusts the hue of the camera
4. **Saturation:** This adjusts the color saturation of the camera
5. **Sharpness:** This adjusts how sharp the image appears
6. **AGC:** This adjusts the automatic gain control for night viewing
7. **Shutter Time:** This adjust the shutter speed to reflect various lighting conditions
8. **Sense-Up:** This allows adjustments of selectable digital slow shutter speeds
9. **D-WDR:** This adjusts digital Wide Dynamic Range, for bright to dark lighting
10. **Video Orientation:** This adjusts video orientation
11. **DNR:** This allows adjustment of digital noise reduction

Image Setting	
①	<b>Brightness:</b> 0 ▼
②	<b>Contrast:</b> 0 ▼
③	<b>Hue:</b> 0 ▼
④	<b>Saturation:</b> 0 ▼
⑤	<b>Sharpness:</b> 0 ▼
⑥	<b>AGC:</b> 8x ▼
⑦	<b>Shutter Time:</b> Outdoor ▼
⑧	<b>Sense-Up:</b> 1/15 ▼
⑨	<b>D-WDR:</b> Off ▼
⑩	<b>Video Orientation</b> <input checked="" type="checkbox"/> Flip <input type="checkbox"/> Mirror
⑪	<b>DNR:</b> 1 (low) ▼

# Video Settings/cont.

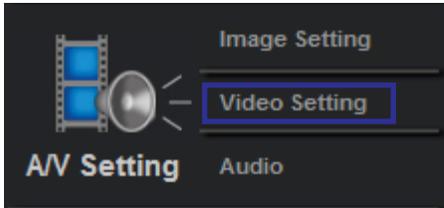


## Video Setting:

Click the drop down list to select Video System



## Streaming: Basic mode:

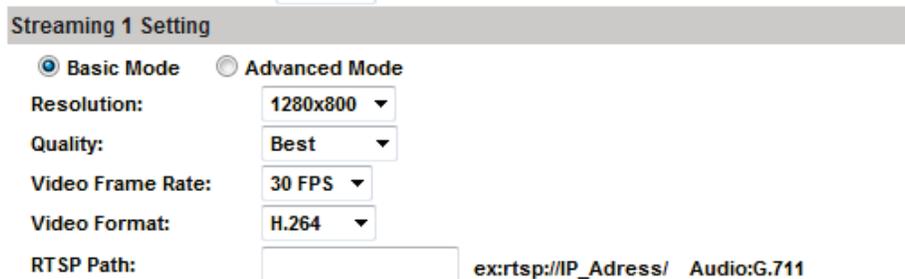

### 1. Resolution:

There are 5 resolutions you can choose from.  
1280x800, 1280x720, 640x480, 320x240, & 176x144

### 2. Quality:

There are 5 levels you can adjust to:  
Best, High, Standard, Medium, & Low  
If you use the highest settings, the network streaming speed will be slower  
Also, if you record any files, the higher the quality, the larger the file will be


3. **Video Frame Rate:** The video refresh rate per second. Setting max is 30 FPS

4. **Video Format:** This describes the codec use for compression. H.264 is newer and higher quality, and MJPEG (JPEG) is an older standard

5. **RTSP Path:** RTSP output name.

For example, if I choose camera, the rtsp path would be as follows: **rtsp://camera/V2**

# Video Settings/cont.

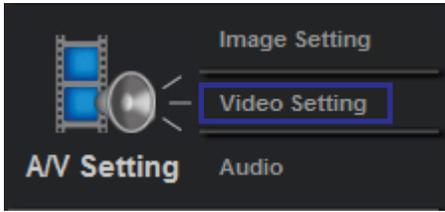

## Streaming (Advanced Mode):

A screenshot of the 'Streaming 1 Setting' configuration page. The page has a grey header with the title 'Streaming 1 Setting'. Below the header, there are two radio buttons: 'Basic Mode' and 'Advanced Mode' (selected and highlighted with a blue box). The settings are as follows:

- Resolution: 1280x800 (dropdown)
- Bitrate Control Mode: CBR and VBR (selected)
- Video Quantitative: 7 (dropdown)
- Video Bitrate: 3Mbps (dropdown)
- Video Frame Rate: 30 FPS (dropdown)
- GOP Size: 1 X FPS (dropdown) with 'GOP = 30' text to the right
- Video Format: H.264 (dropdown)
- RTSP Path: A text input field followed by the example 'ex:rtsp://IP\_Address/ Audio:G.711'

### 1. Resolution:

There are 5 resolutions you can choose from.

- 1280x800
- 1280x720
- 640x480
- 320x240
- 176x144

### 2. Bitrate Control mode:

There are 2 choices. CBR (Constant Bit Rate) and VBR (Variable Bit Rate)

**A. CBR: 32Kbps-8Mbps** (The higher the CBR, the better your video quality will be)

**B. VBR: 1 (Low) to 10 (High)** Compression rate. The higher the compression rate the higher the picture quality, and vice versa. The balance between VBR and network bandwidth will affect your picture quality. When using VBR, it is less likely that your streaming video will break up or lag.

### 3. Video Frame Rate: The video refreshing rate per second


NTSC: Max 30 frames per second PAL: Max 25 Frames per second

### 4. GOP Size: This means 'Group of Pictures.' The higher the GOP is, the better the quality of the images

### 5. Video Format: This describes the codec use for compression. H.264 is newer and higher quality, and MJPEG (JPEG) is older, but used in some control systems

### 6. RTSP Path: RTSP output connecting route for example, **rtsp://camera/v1**

# Video Settings/cont.

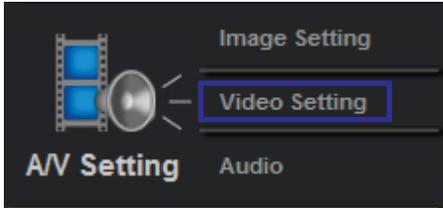

## Stream 2 (Basic Mode):

**Streaming 2 Setting**

Basic Mode  Advanced Mode

Resolution: 640x480

Quality: Standard

Video Frame Rate: 15 FPS

Video Format: JPEG

RTSP Path: v2 **ex:rtsp://v2 Audio:G.711**

### 1. Resolution:

There are 5 resolutions you can choose from.

1280x800  
1280x720  
640x480  
320x240  
176x144

### 2. Quality:

There are 5 levels you can adjust to:

Best, High, Standard, Medium, & Low

If you use the highest settings, the network streaming speed will be slower

Also, if you record any files, the higher the quality, the larger the file will be


### 3. Video Frame Rate: The video refreshing rate per second

### 4. Video Format: This describes the codec use for compression. H.264 is newer and higher quality, and MJPEG (JPEG) is older

### 5. RTSP Path: RTSP output connecting route

For example, **rtsp://camera/v2**

# Video Settings/cont

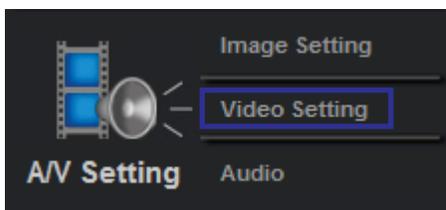

Stream 2 Advanced Mode:

**Streaming 2 Setting**

Basic Mode  **Advanced Mode**

**Resolution:** 640x480

**Bitrate Control Mode:**  CBR  VBR

**Video Quantitative:** 7

**Video Bitrate:** 1.5Mbps

**Video Frame Rate:** 15 FPS

**GOP Size:** 1 X FPS

**Video Format:** H.264

**RTSP Path:** v2 **ex:rtsp://</>v2 Audio:G.711**

**1. Resolution:**

There are 5 resolutions you can choose from.  
1280x800,1280x720, 640x480, 320x240, & 176x144

**2. Bitrate Control mode:**

There are 2 choices. CBR (Constant Bit Rate) and VBR (Variable Bit Rate)

**3. Video Frame Rate:** The video refreshing rate per second.

**4. GOP Size:** This means ‘Group of Pictures.’ The higher the GOP is, the better the quality of the images.

**5. Video Format:** This describes the codec use for compression. H.264 is newer and higher quality, and MJPEG (JPEG) is older.

**6. RTSP Path:** RTSP output connecting route.

**3GPP Streaming Setting**

Enabled  **Disabled** (Resolution=176x144, FPS=5, Format=MPEG4)

**3GPP Path:** 3g **ex:rtsp://</>3g Audio:AMR**

**ex:rtsp://</>3gx No Audio**


**7. 3GPP Streaming Mode:**

1. Enable or Disable 3GPP Streaming
2. 3GPP: 3GPP output name

**Apply**

\*Channel Vision recommends you use 176x144 resolution, 5FPS, MPEG4 format for 3GPP mode

# Recommended Video Settings

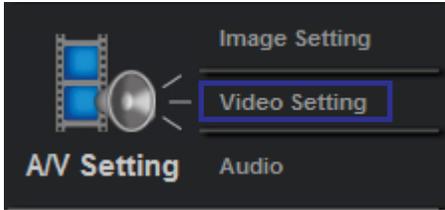

Below are a few examples of recommended settings, depending on the situation.

## 1. Viewing a stationary object, or area that does not receive a high amount of movement

If the camera is looking at a stationary object, or an area that does not receive a lot of traffic or movement, the camera can be set to the highest settings. An example of the highest settings are below:

**Streaming 1 Setting**

Basic Mode    **Advanced Mode**

Resolution: 1280x800

Bitrate Control Mode:  CBR    VBR

Video Quantitative: 7

Video Bitrate: 3Mbps

Video Frame Rate: 30 FPS

GOP Size: 1 X FPS   GOP = 30

Video Format: H.264

RTSP Path:  ex:rtsp://IP\_Adress/ Audio:G.711

## 2. Viewing an area that receives a high amount of traffic or movement

If the camera is looking at an area that views constant or near constant movement, a medium setting is recommended. An example of medium settings are below:

**Streaming 1 Setting**

Basic Mode    **Advanced Mode**

Resolution: 1280x720

Bitrate Control Mode:  CBR    **VBR**

Video Quantitative: 5


Video Bitrate: 2Mbps

Video Frame Rate: 10 FPS

GOP Size: 1/2 X FPS   GOP = 5

Video Format: H.264

# Recommended Video Settings/cont

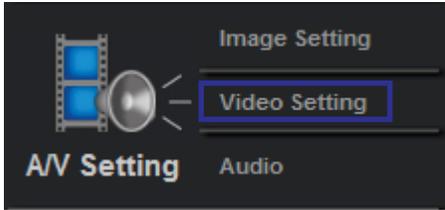

### 3. Viewing on a slow internet connection

If the IP Camera is installed on a network that does not have a very fast internet connection, or you are viewing on a network with limited bandwidth, the example below is recommended.

#### Streaming 1 Setting

Basic Mode     Advanced Mode

Resolution:	640x480 ▾
Quality:	Standard ▾
Video Frame Rate:	3 FPS ▾
Video Format:	JPEG ▾

### 4. Viewing the IP Camera on the lowest settings


Below is an example of the lowest settings.

#### Streaming 1 Setting

Basic Mode     Advanced Mode

Resolution:	176x144 ▾
Quality:	Low ▾
Video Frame Rate:	3 FPS ▾
Video Format:	JPEG ▾

# Event List

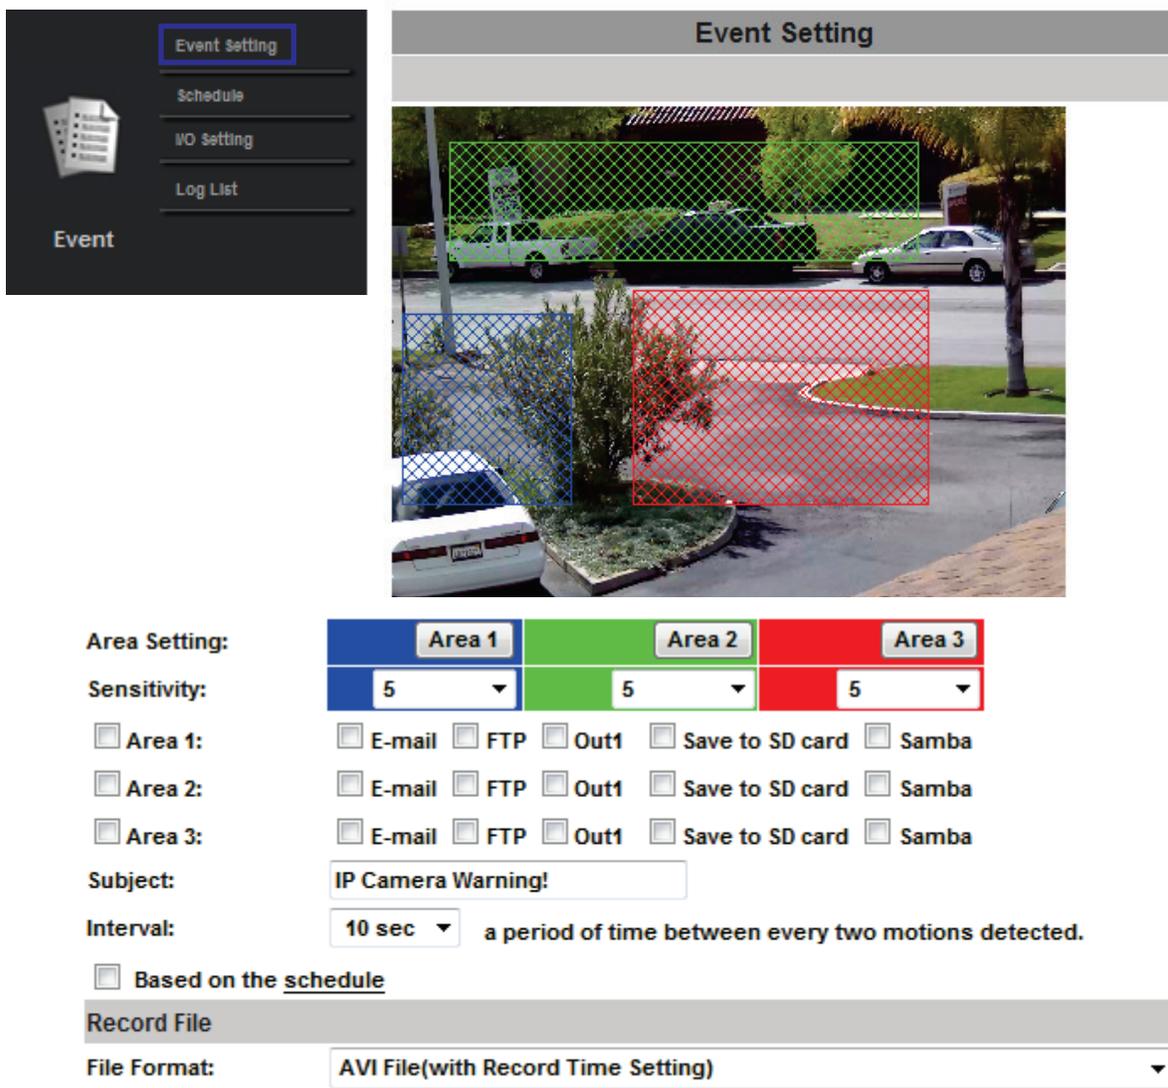

**Event Setting**

Area Setting:

	Area 1	Area 2	Area 3
Sensitivity:	5	5	5
Area 1:	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	<input type="checkbox"/> Out1
Area 2:	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	<input type="checkbox"/> Out1
Area 3:	<input type="checkbox"/> E-mail	<input type="checkbox"/> FTP	<input type="checkbox"/> Out1

Subject: IP Camera Warning!

Interval: 10 sec a period of time between every two motions detected.


Based on the schedule

**Record File**

File Format: AVI File(with Record Time Setting)

- 1.) **Event Setting:** The purpose of this menu is to configure what the camera will do when an "event" is generated.
- 2.) **Motion Detection**  
 The IP Camera allows 3 areas of motion detection. (Area Setting) When motion is triggered, they can send the video, in the form of events to a specific mail address, transmit the live video to a remote FTP server, & trigger a relay.  
 To set up the motion area, click "Area Setting". Use the mouse to click and drag a box of the area you want to select. The same method is used for area 2 and area 3.
- 3.) **Record File Setting:** The IP camera allows 3 different types of recorded files.
  - A.) **AVI File** (With time stamp) This is the largest file size option to choose, but the video will be the highest quality available.
  - B.) **JPEG (MJPEG) File** (With time stamp) This is a smaller file size to choose, but is of lower quality than the AVI format.
  - C.) **JPEG (MJPEG) Single file** with interval setting.

# Event List/cont.

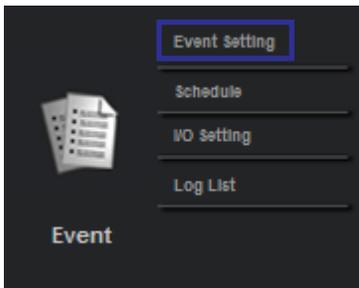

## Record Time Setting

Pre Alarm: 5 sec ▼

Post Alarm: 5 sec ▼

## Network Dis-connected

Dis-connected:  Save to SD card

## Network IP Check

IP Check:  Enabled  Disabled

IP Address:

Interval: 30 sec ▼

Check failed:  Connection failed four times. Reboot IP Camera.

Save to SD card

#### 4.) Record Time Setting:

Pre Alarm and Post Alarm setups for record start and end time when motion is detected, or to trigger a relay. Note: Pre/Post Alarm record time based on record time setting and IP Camera's built-in memory. The ability to store data is limited, so if the video quality is set very high, this will cause a drop in the recorded FPS. This will also decrease pre or post recording time.

#### 5.) Network Dis-connected:

To avoid loss of data, the IP camera will start to save the video to a Micro SD card (if installed) when it detects that the Ethernet cable has been unplugged. The video will continuously be saved into Micro SD card, divided into 5 minute increments, until the network is reconnected. When the SD card is full, it will automatically overwrite the oldest file, one at a time. This will only function automatically when first wired to a network, and "Save to SD card" is selected.

#### 6.) Network IP Check:

This option checks your internet connection (Interval) to make sure your network connection has not been lost.


"IP Check" enables or disables this feature.

"IP Address" is what the camera or website address will use to check if the internet is still working,

"Interval" is how often the camera will test your internet connection.

"Check Failed" The first option "Connection failed four times" will restart the camera if the network check fails four times. The second option (Save to SD card) will save video to the SD card if the network fails.

# Schedule

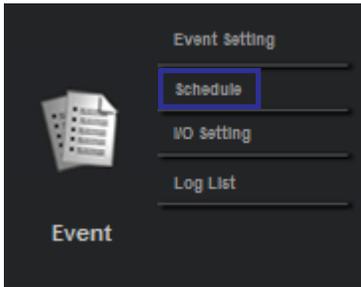

- 1.) **Schedule:** Complete schedule setup to tell the IP Camera when to record data.
- 2.) **Snapshot:** After enabling the snapshot function, user can select the storage location of the snapshot, the time of snapshot, and the file name of snapshot.

Schedule																								
All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mon.																								
Tue.																								
Wed.																								
Thu.																								
Fri.																								
Sat.																								
Sun.																								


 With schedule setup.

Snapshot	
<input checked="" type="radio"/> Enabled	<input type="radio"/> Disabled
Snapshot:	<input type="checkbox"/> E-mail <input type="checkbox"/> FTP <input type="checkbox"/> Save to SD card <input type="checkbox"/> Samba
Interval:	<input type="text" value="10"/> Second(s) [1..50000]
File Name:	<input type="text" value="Snapshot"/>

Click "Enabled" to enable snapshot.  
Select the E-mail, FTP, Save to SD card, Samba option to enable.


Click the desired areas (boxes) to designate recording time.  
Green=record

# I/O Setting

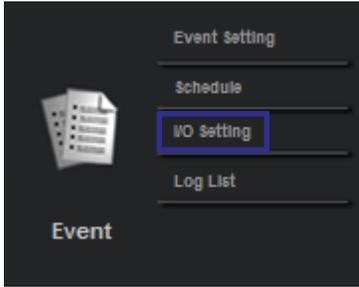

## I/O Setting:

The IP Camera supports 1 input/1 output. When the input is triggered, it can send the video to a specific e-mail address, (only one receiver email is allowed) transmit the video to a remote ftp server, or trigger a relay.

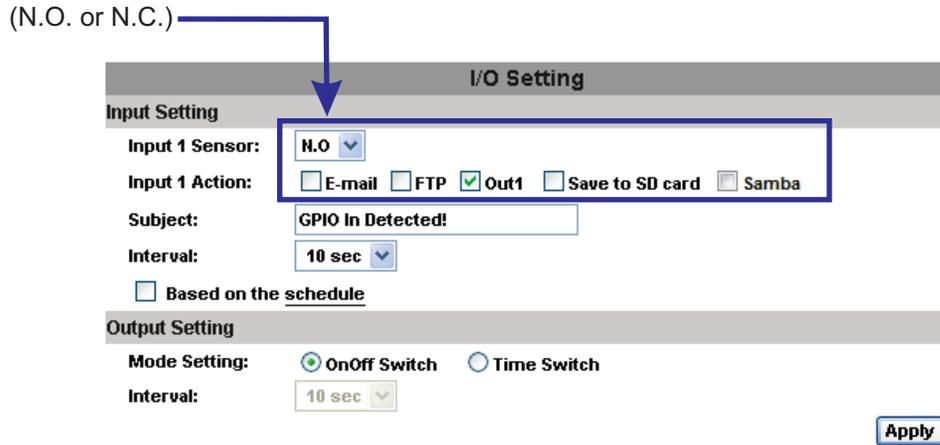


**Digital Input Setting:** The D.I. port activates related functions when I/O input is triggered (N.O. or N.C.)


**Digital Output Setting:** The D.O. port activates a switch, slide switch or pan/tilt module for use with any standard relay box

GND	Digital Input: 5vDC max
D.O.	
D.I.	Digital Output: 5vDC 50mA max
GND	

**WARNING:**  
DO NOT CUT THE BREAKOUT CABLE.  
CUTTING THE CABLE WILL VOID THE  
WARRANTY ON THE DEVICE.

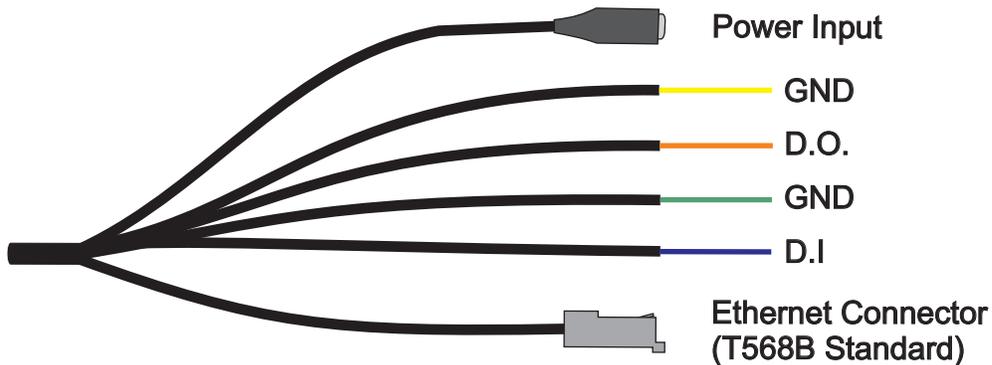

# I/O Setting/cont

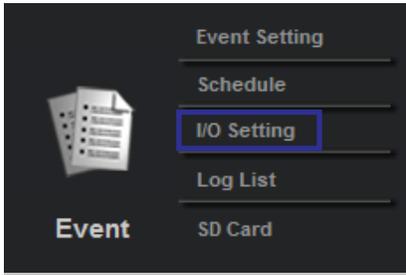


## I/O Setting:

The IP Camera supports 1 input/1 output. When a input is triggered, it can send the video to a specific e-mail address, transmit the video to remote ftp server, or trigger a relay.

**\*Maximum voltage allowed is 5vDC 50mA.**

## INSTALLATION EXAMPLE: Floodlight

Trigger a normally off (Normally Open) alarm siren that activates when an event/motion occur at the GND and D.O. terminal.

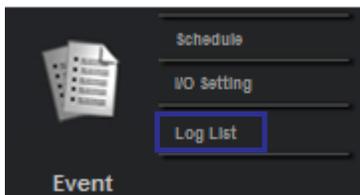


## Log List

**Log List:** This menu provides access to the logs the IP camera will create.

Log List	
System Logs	<a href="#">Logs</a>
Motion Detection Logs	<a href="#">Logs</a>
I/O Logs	<a href="#">Logs</a>
All Logs	<a href="#">Logs</a>

# SD Card

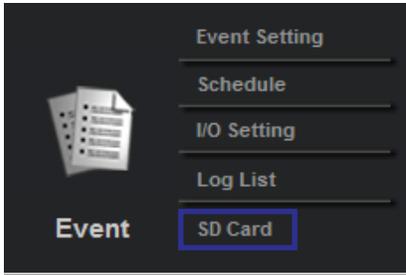


## SD Card:

Below is a picture showing the location of the SD card in the IP camera. Using the Micro SD card could affect the frame rate of the video. Make sure the Micro SD card is pushed into the slot completely.



The capacity of the SD card is shown in the SD card menu. Below is a list of the video files recorded. The video format recorded to the SD card is AVI. Double click the video to open Windows Media Player and play the selected file. To format the SD card, select "Format SD Card"

**Auto Deletion:** When the SD card is full, it will automatically delete the oldest video files. You can select the number of days to keep using the drop-down menu.

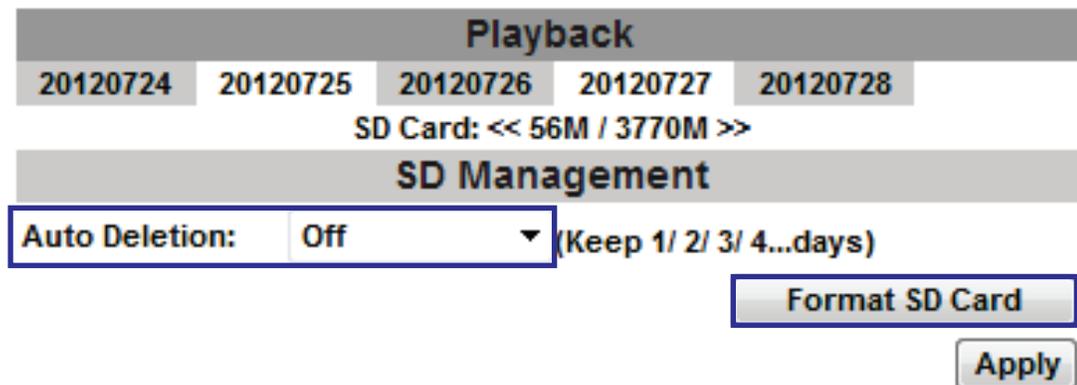


# Port Forwarding

In order to view the IP camera from outside of your home or business network, port forwarding configuration will be required in your router.

## Port Forwarding TP-Link Routers

In the example below, there is a IP camera running on port 8002 on the LAN.

1. Add the IP information, including the desired port into the port forwarding tab of “forwarding” in the router
2. Check “Enable Port Forwarding”

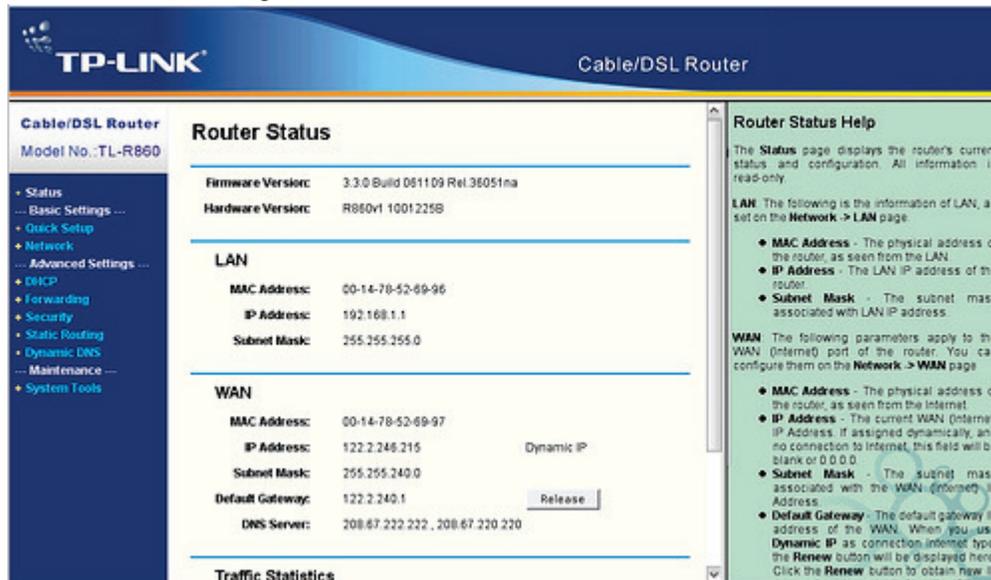

3. Select “Add or Modify a Virtual Server Entry”
4. Select and add “service port” as port of the camera
5. Enter IP address of camera under “IP address
6. Change Protocol to “all”
7. Change status to “enabled”
8. Select “Save” to save changes

## Add or Modify a Virtual Server Entry

Service Port:	<input type="text" value="1720"/>	(XX-XX or XX)
IP Address:	<input type="text" value="192.168.1.169"/>	
Protocol:	<input type="text" value="8000"/>	
Status:	<input type="text" value="ALL"/>	
	<input type="text" value="192.168.1.222"/>	
	<input type="text" value="Enabled"/>	
Common Service Port:	<input type="text" value="--Select One--"/>	
<input type="button" value="Save"/> <input type="button" value="Return"/>		

TPLINK is a registered trademark of TP-link Technologies CO. LTD.

# UPNP Port Forwarding

In order to view the IP camera from outside of your home or business network, port forwarding configuration will be required in your router.

Alternatively, you can use what is called UpNp, or Universal Plug and Play.

Follow the instructions below to configure the IP Camera for UpNp.

By default, the IP Camera is set to port 80.

This can be changed if needed, but 80 (industry standard for default http server port) but is not required.

The screenshot shows the Channel Vision web interface with the following configuration steps highlighted:

- Step 1:** Click "Setup" (indicated by a blue arrow pointing to a gear icon in the top right corner).
- Step 2:** Click "IP setting" (indicated by a blue arrow pointing to the "IP Setting" menu item in the left sidebar).
- Step 3:** Click "enabled" (indicated by a blue arrow pointing to the "Enabled" checkbox in the UPNP Port Forwarding section).
- Step 4:** This is required, please choose a port for your IP Camera. Default is 80 (indicated by a blue arrow pointing to the "External HTTP Port" field, which contains the value 80).
- Step 5:** Click "Apply" (indicated by a blue arrow pointing to the "Apply" button).

Additional information for Step 3: Generally unused, not required

IP Setting	
<b>IP Assignment</b>	
<input type="radio"/> DHCP	
<input checked="" type="radio"/> Static	
IP Address:	192.168.1.219
Subnet Mask:	255.255.255.0
Gateway:	192.168.1.1
DNS 1:	192.168.1.9
DNS 2:	192.168.1.5
Web Page Port:	8019
<b>UPNP Port Forwarding</b>	
<input checked="" type="checkbox"/> Enabled	
External HTTP Port:	80
External RTSP Port:	554

Go to [www.channelvision.com](http://www.channelvision.com) for detailed port forwarding, DDNS service, & Channel Vision iPhone and iPad app. iPod and iPad are trademarks of Apple Inc., registered in the U.S. and other countries.

# 6533 Specifications

<b>CPU:</b>	Arm 9, 32 bit RISC
<b>RAM:</b>	128MB
<b>Flash:</b>	16MB
<b>Image Sensor:</b>	1/4" 2 Mega-Pixel CMOS sensor
<b>Sensitivity:</b>	1.0 Lux @ 30fps
<b>Shutter Time:</b>	1/5 - 1/10,000 sec
<b>Lens Type:</b>	4.2mm@F1.6
<b>I/O:</b>	1 Digital Input, 1 Digital Output
<b>Power Over Ethernet:</b>	Yes, 48V power consumption, Max 2.8W
<b>Power:</b>	12vDC 170mA (2.04 watts max)
<b>Operating Temperature:</b>	14° F - 113° (-10°C - 45°C)
<b>Dimensions:</b>	3.15" in Diameter by 2.64" Height
<b>Weight:</b>	11.99 Ounces
<b>Ethernet:</b>	10/100 Base-T
<b>Network Protocol:</b>	HTTP, HTTPS, SNMP, QoS/DSCP, Access list, IEEE, 802.1X, RTSP, TCP/IP, UDP, SMTP, FTP, PPPoE, DHCP, DDNS, NTP, UPnP, 3GPP, SAMBA, Bonjour
<b>Max Resolution:</b>	1280x800
<b>Video Resolution:</b>	1280x800, 1280x720, 640x489, 320x240, and 176x144 (30FPS)
<b>Video Adjustments:</b>	Brightness, Contrast, Hue, Saturation, Sharpness, Shutter speed, AGC, Sense-up, D-WDR, Flip, Mirror, Noise Reduction, Day & Night adjustable
<b>Motion Detection:</b>	Yes, 3 different areas
<b>Triggered Action:</b>	Mail, FTP, DO, Samba
<b>Security:</b>	Password protection, IP address filtering, HTTPS encrypted, 802.1x port based authentication for network protection, & QoS/DSCP
<b>Vandal Proof:</b>	Yes
<b>Motion Detection:</b>	Yes, digital only
<b>Maximum Users:</b>	10
<b>Micro SD Card Management:</b>	Recording Trigger: Motion Detection, IP check, Network break down, Schedule Video Format: AVI, JPEG Video Playback: Yes Delete Files: Yes

## System Requirements (Setup)

<b>OS:</b>	Windows XP, 7, or 8 recommended
<b>Browser:</b>	Microsoft IE 6.0 or above
<b>Suggested Hardware:</b>	Intel Dual Core 1.66G, RAM: 1024MB, Graphic card: 128MB

## System Requirements (Live Viewing)

<b>OS:</b>	Windows XP, 7, 8, or Macintosh version 10.6 or newer
<b>Browser:</b>	Microsoft IE 6.0 or newer, Safari, Firefox, & Chrome
<b>Suggested Hardware:</b>	Intel Dual Core 1.66G, RAM: 1024MB, Graphic card: 128MB (Windows)

\*Specifications subject to change without notice



## **1 Year Limited Warranty**

Channel Vision Technology will repair or replace any defect in material or workmanship which occurs during normal use of this product with new or rebuilt parts, free of charge in the USA, for one year from the date of original purchase. This is a no hassle warranty with no mail in warranty card needed. This warranty does not cover damages in shipment, failures caused by other products not supplied by Channel Vision Technology, or failures due to accident, misuse, abuse, acts of God, or alteration of the equipment. This warranty is extended only to the original purchaser, and a purchase receipt, invoice, or other proof of original purchase date will be required before warranty repairs are provided.

Mail in service can be obtained during the warranty period by calling (800) 840-0288 toll free. A Return Authorization number must be obtained in advance and can be marked on the outside of the shipping carton.

This warranty gives you specific legal rights and you may have other rights (which vary from state to state). If a problem with this product develops during or after the warranty period, please contact Channel Vision Technology, your dealer or any factory-authorized service center.

Channel Vision products are not intended for use in medical, lifesaving, life sustaining or critical environment applications. Channel Vision customers using or selling Channel Vision products for use in such applications do so at their own risk and agree to fully indemnify Channel Vision for any damages resulting from such improper use or sale.

**FC** Tested To Comply  
With FCC Standards



This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

 **CHANNEL VISION™**  
**www.channelvision.com**

234 Fischer Avenue, Costa Mesa, California 92626 USA  
(714)424-6500 • (800)840-0288 • (714)424-6510 fax  
email: [techsupport@channelvision.com](mailto:techsupport@channelvision.com)